

1961 RAMBLER AMBASSADOR & CLASSIC V8

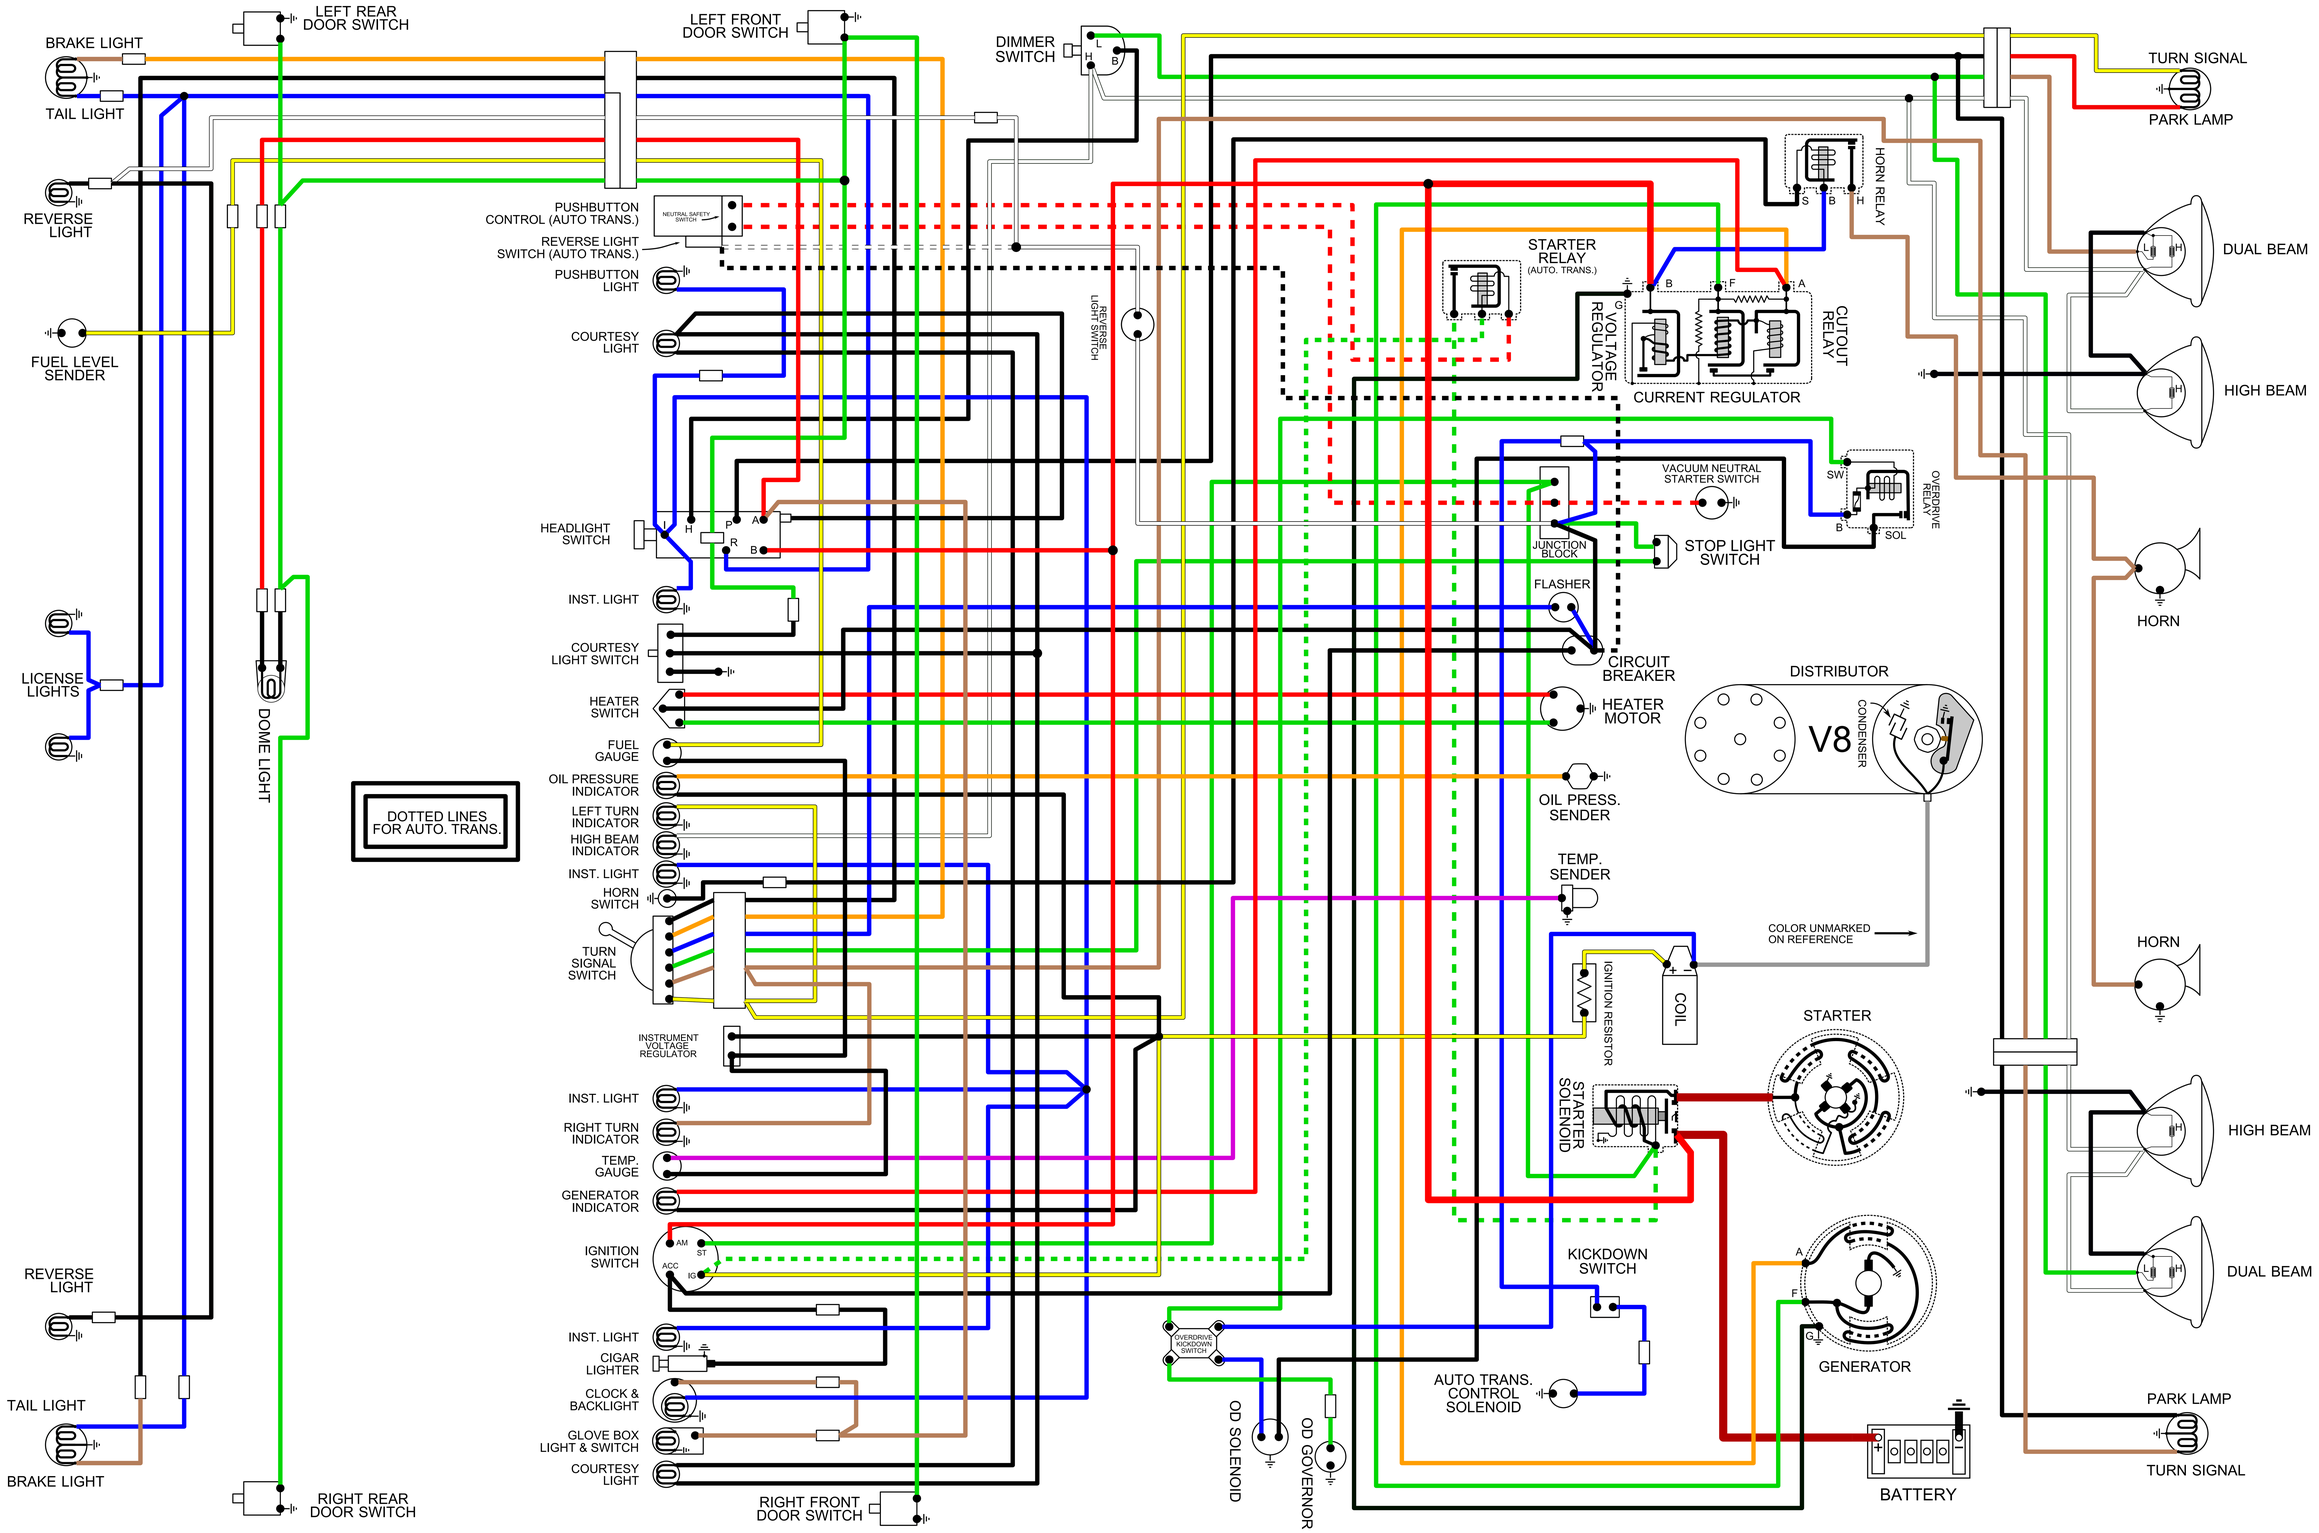

CINCO

1961 RAMBLER AMBASSADOR & CLASSIC V8


MAIN POWER

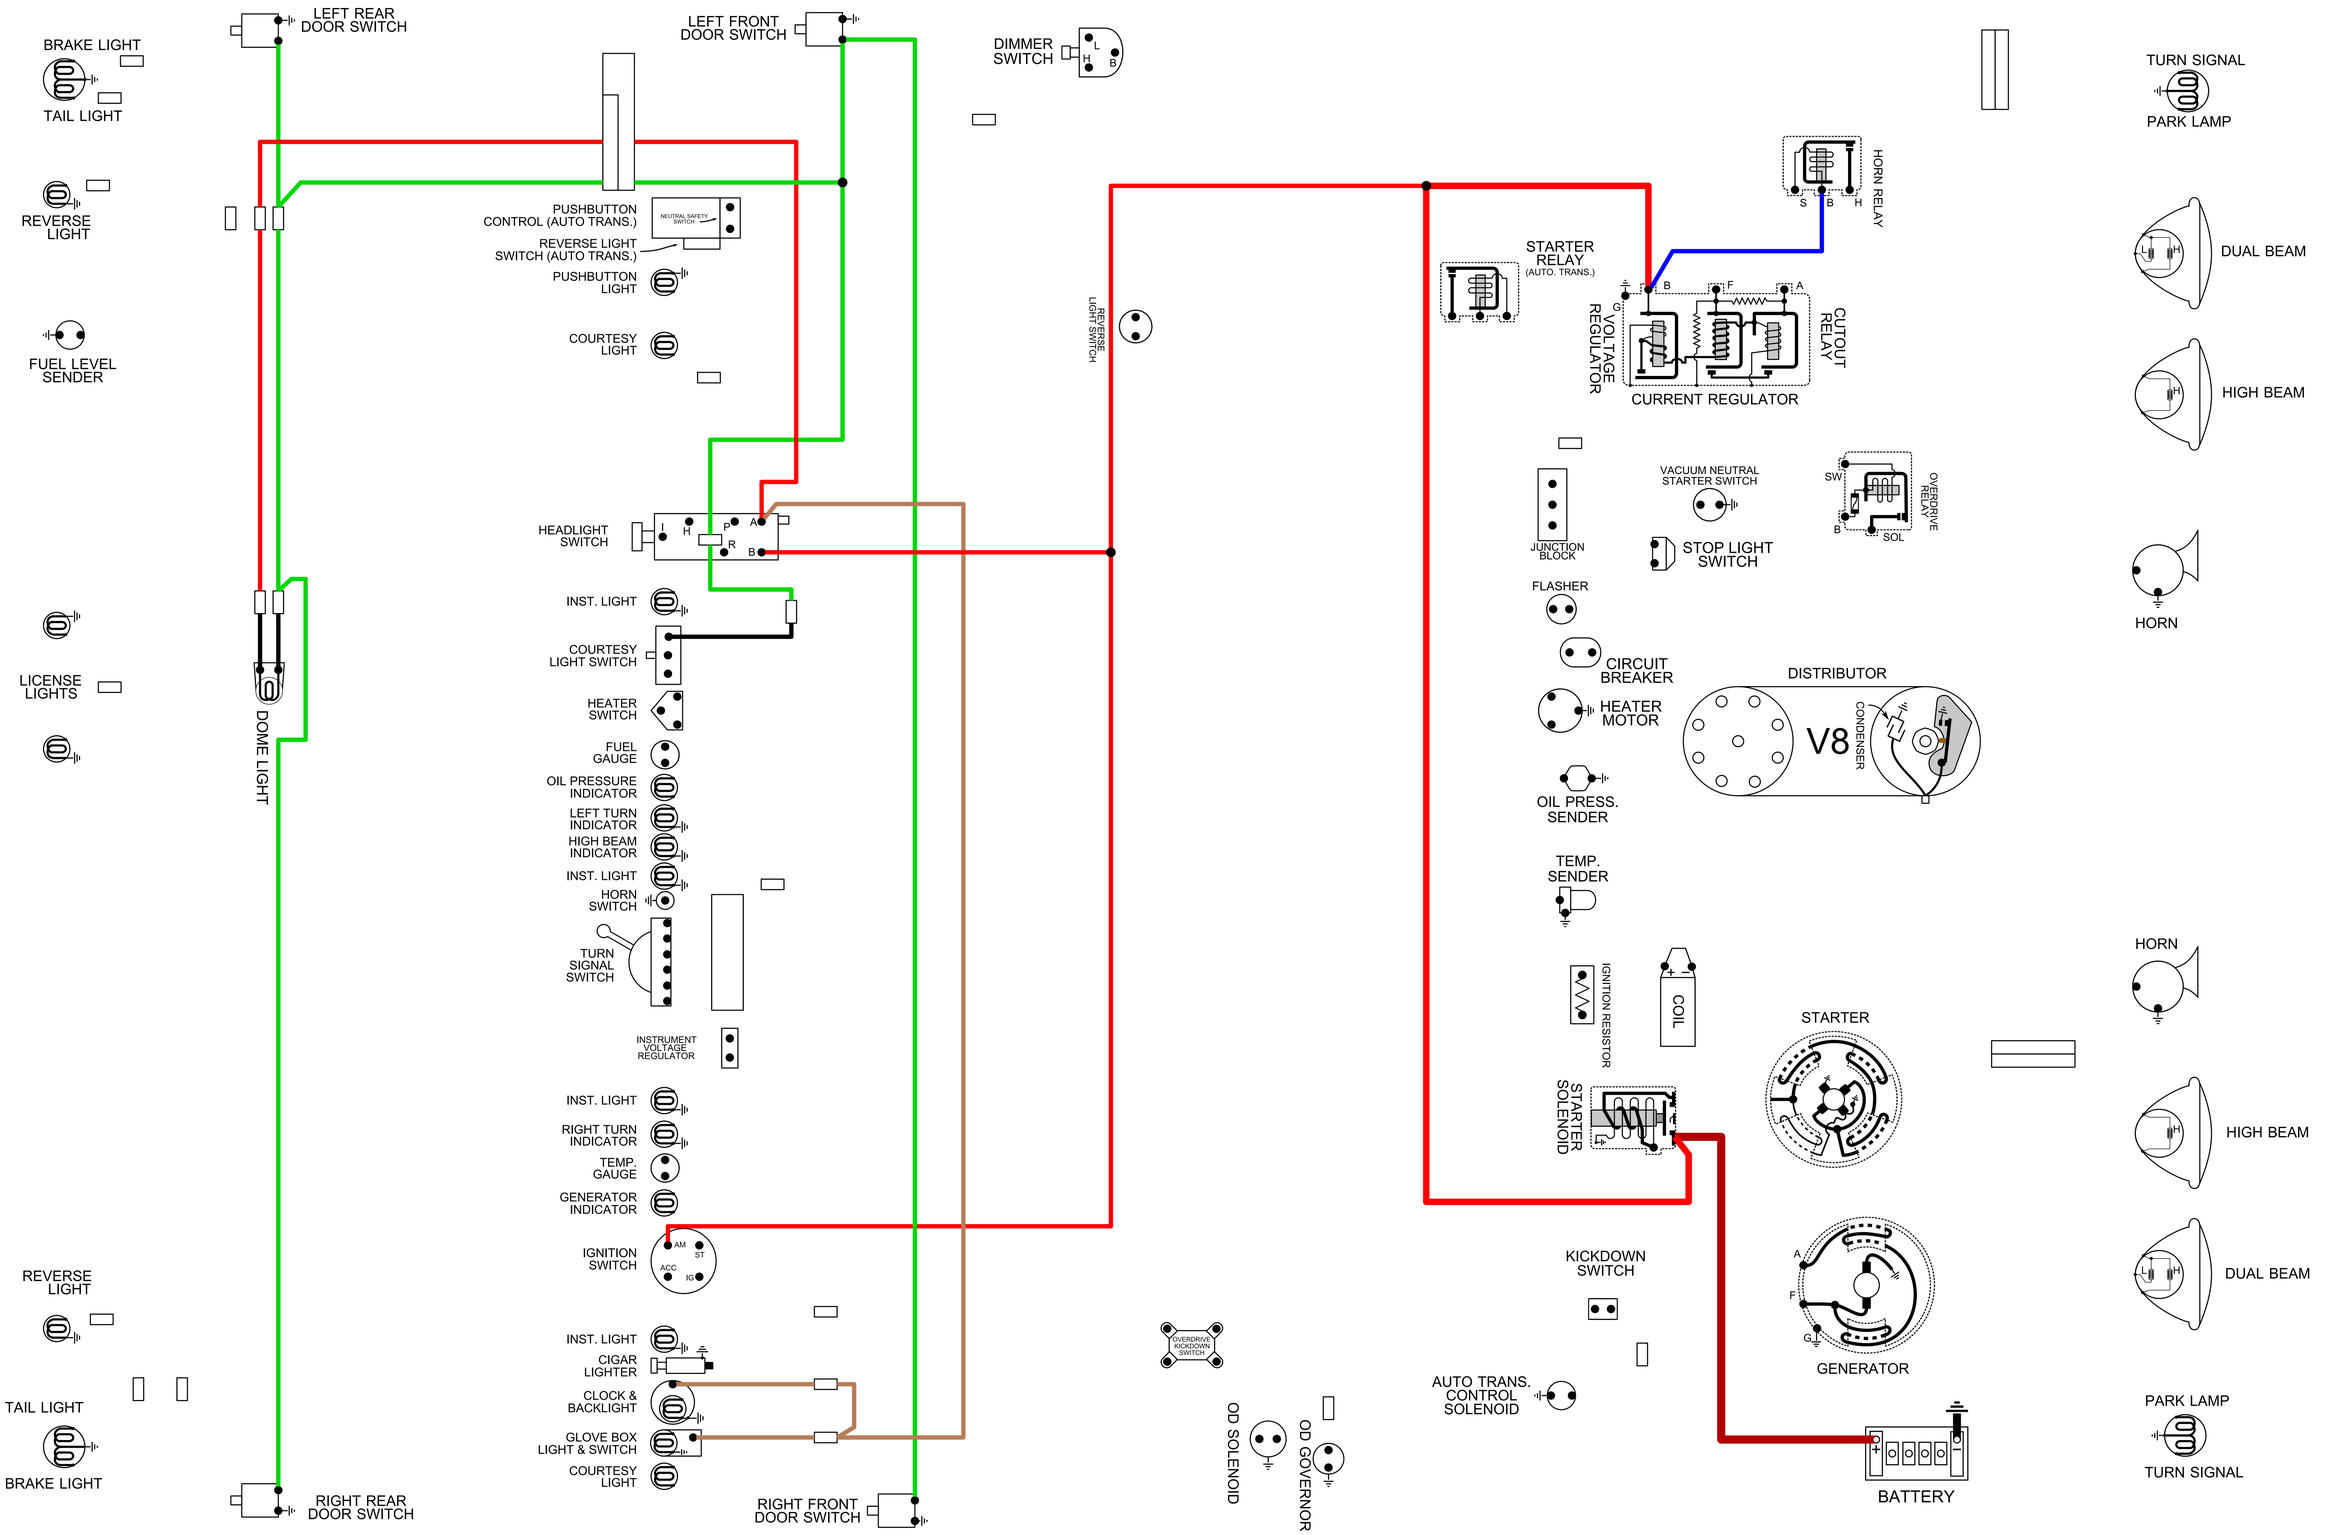

CINCO


1961 RAMBLER AMBASSADOR & CLASSIC V8

ACCESSORY POWER

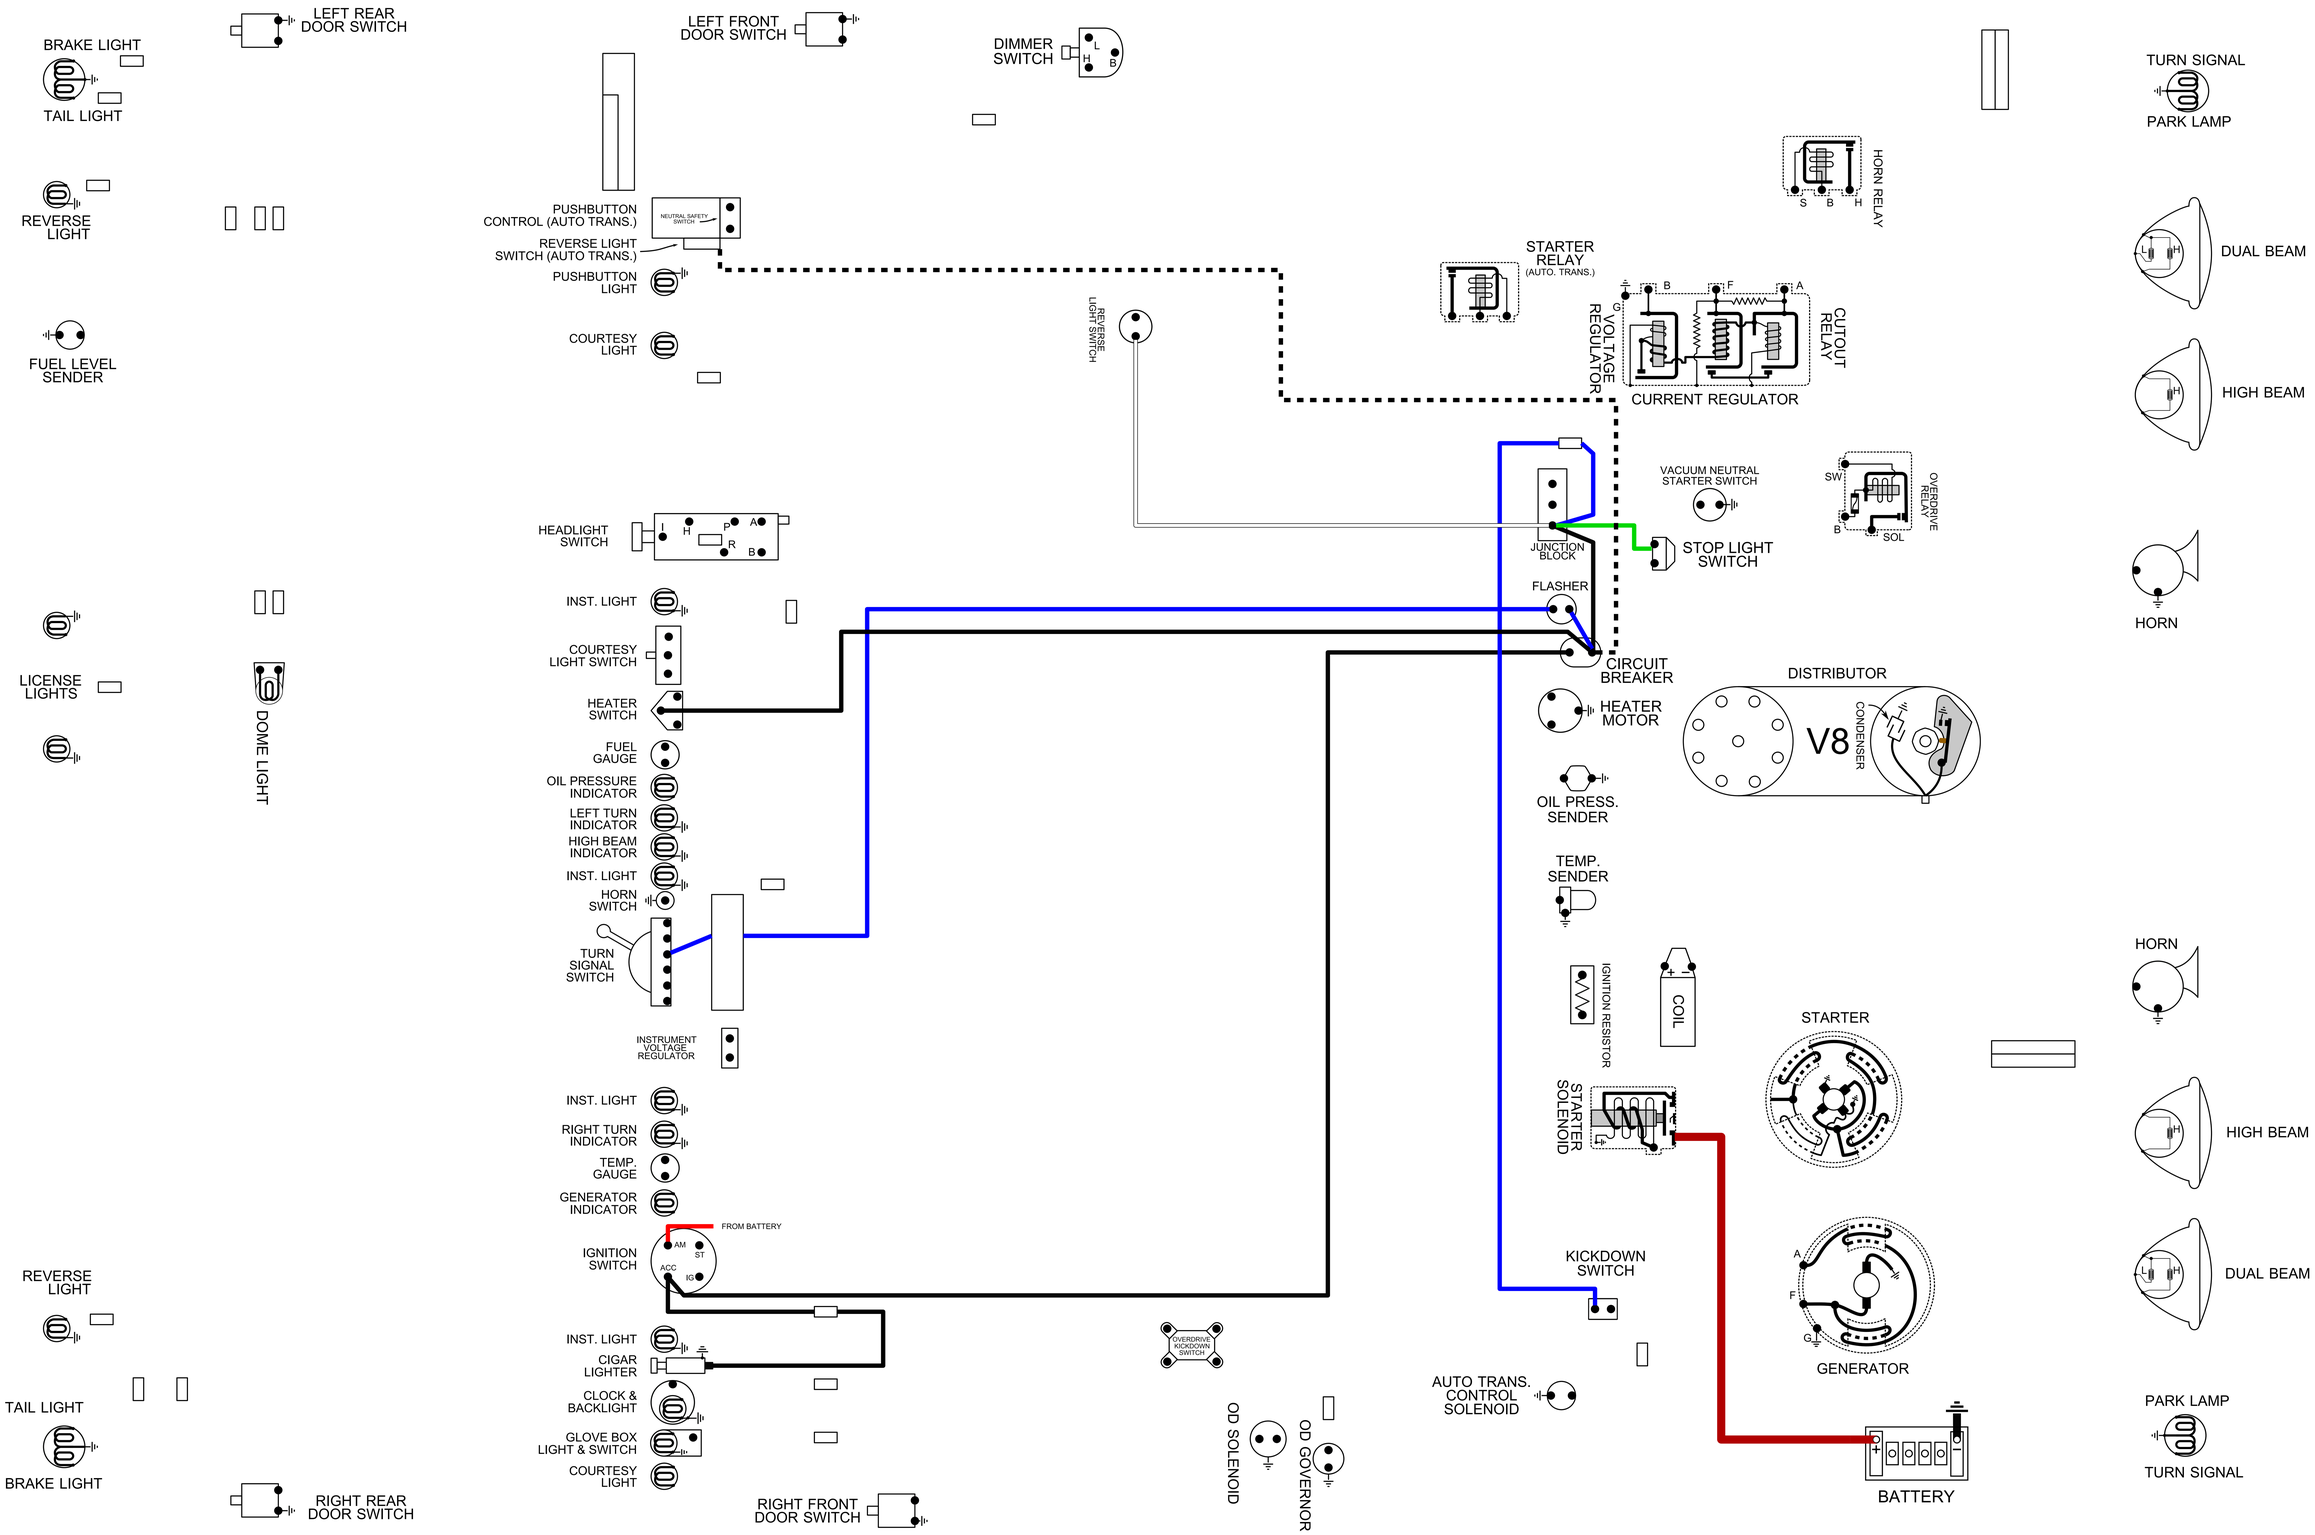


CINCO

1961 RAMBLER AMBASSADOR & CLASSIC V8
IGNITION SYSTEM

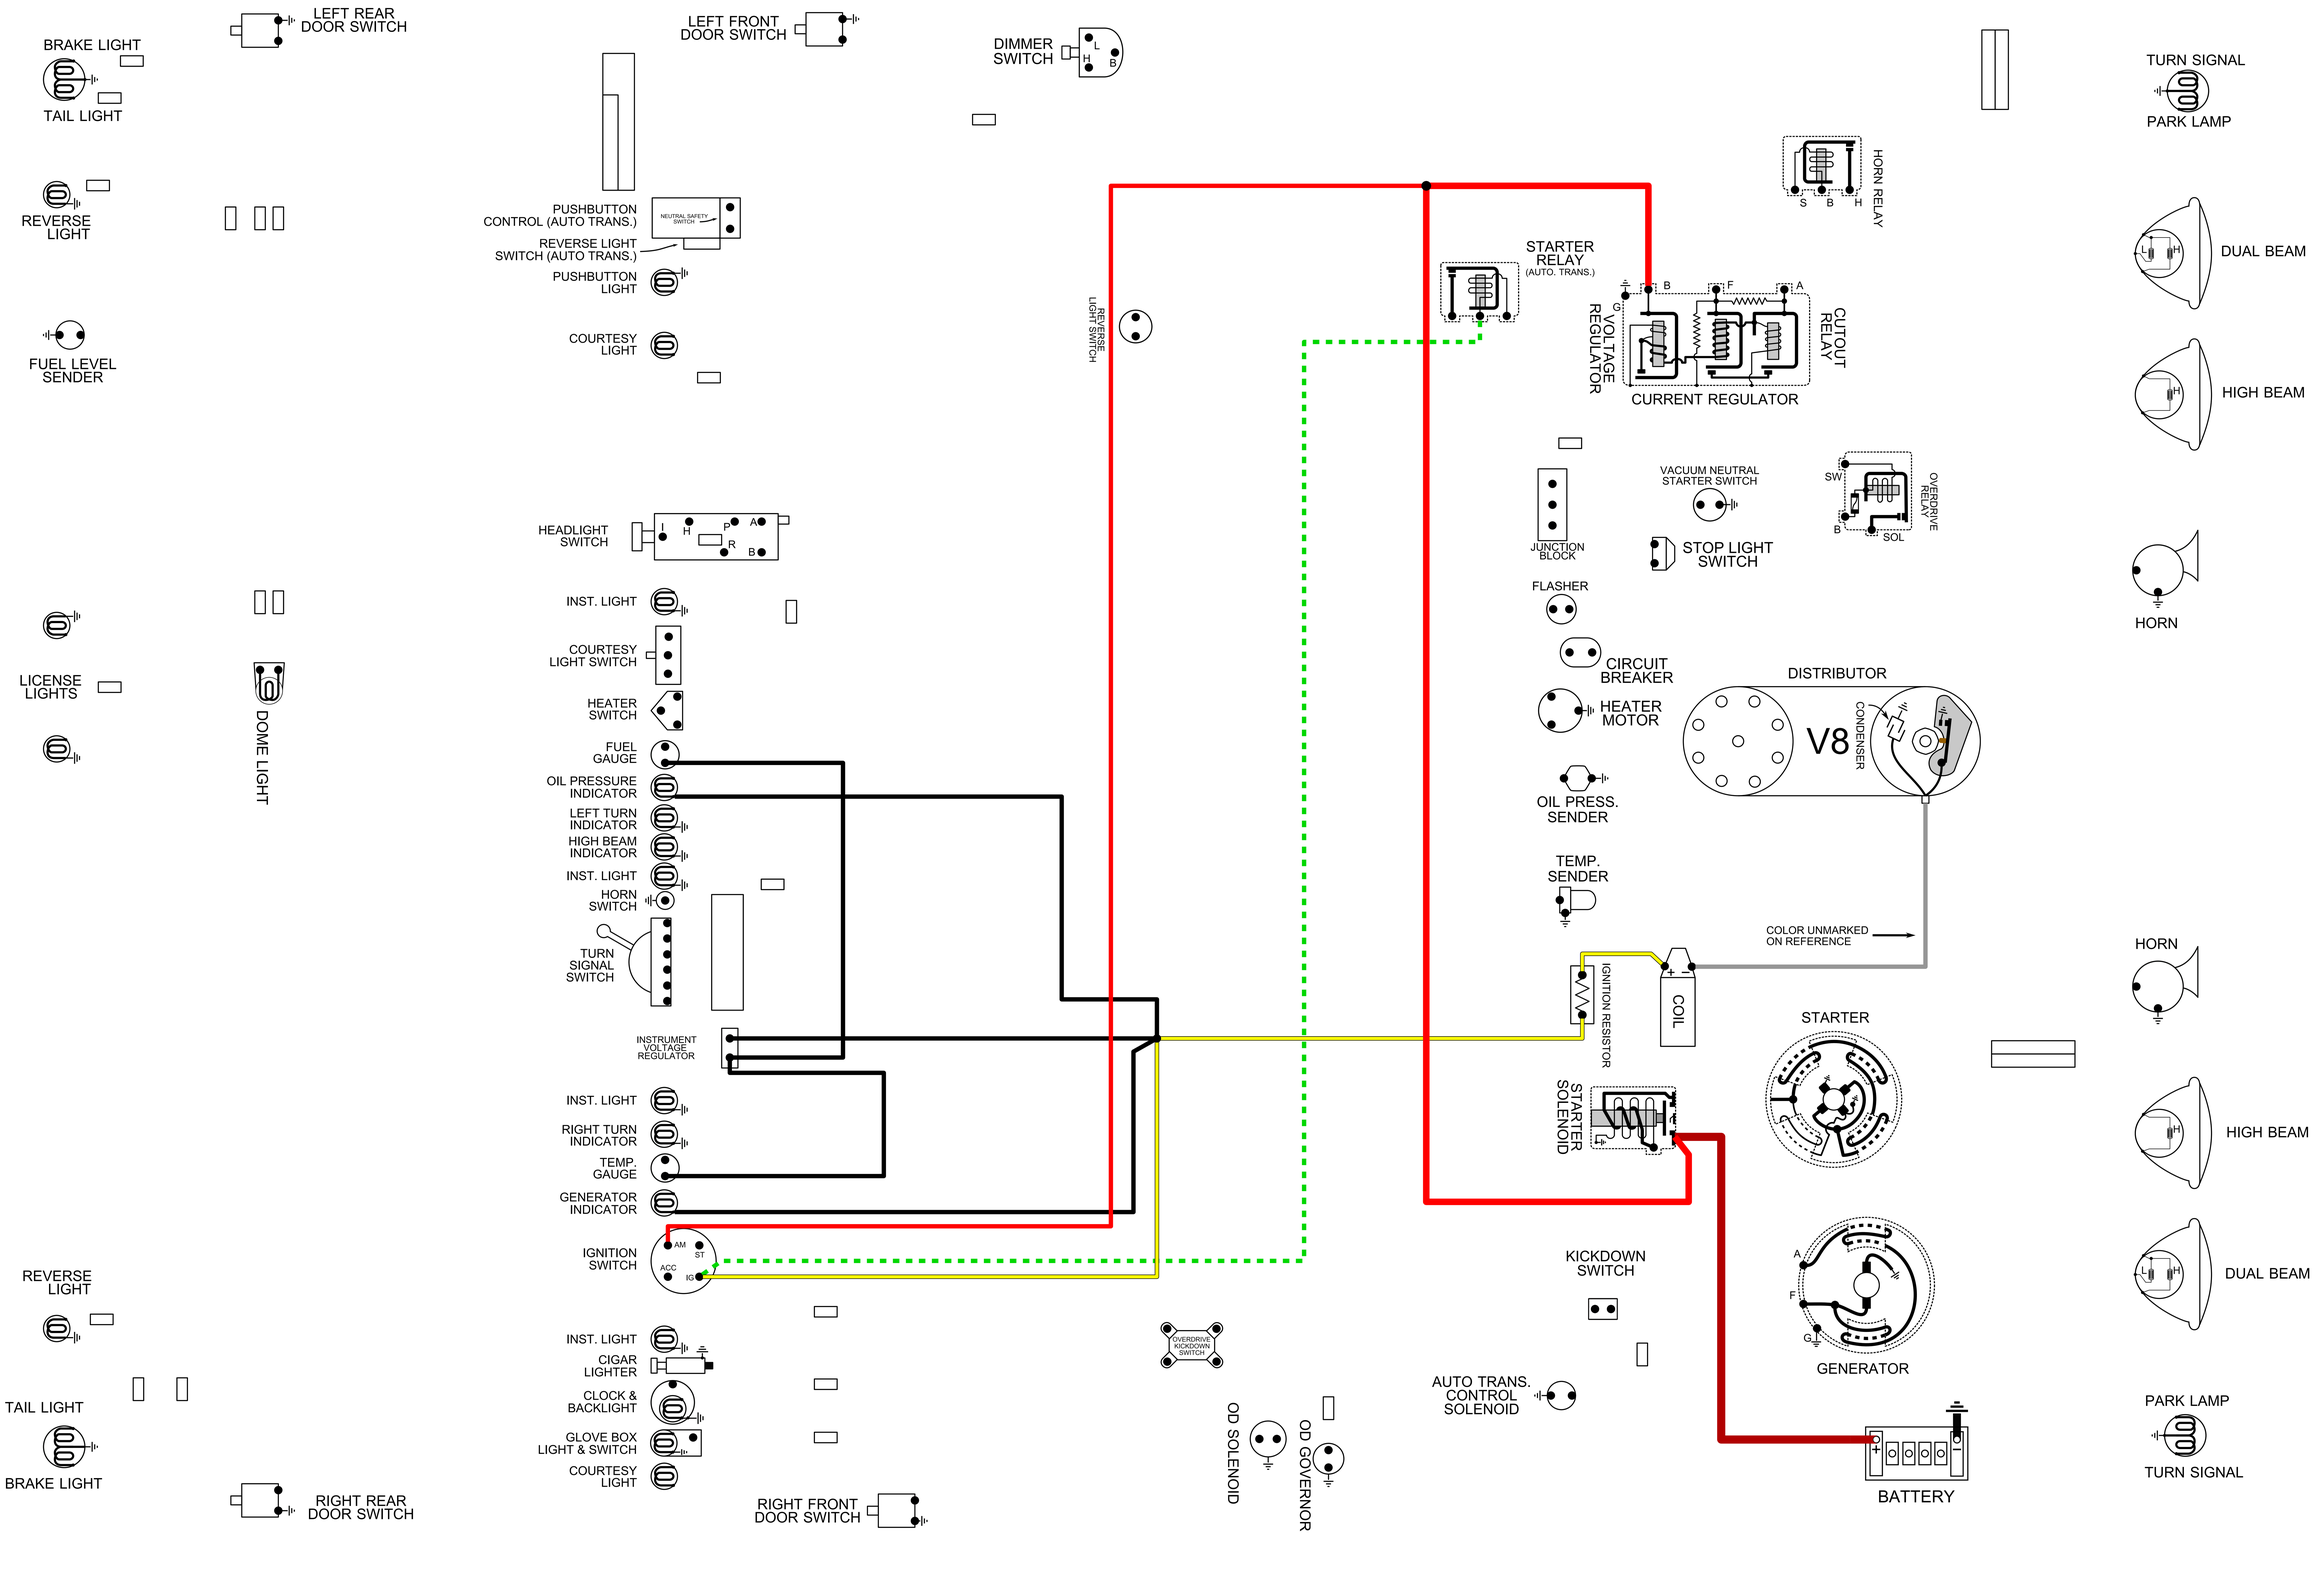

1961 RAMBLER AMBASSADOR & CLASSIC V8


STARTING SYSTEM

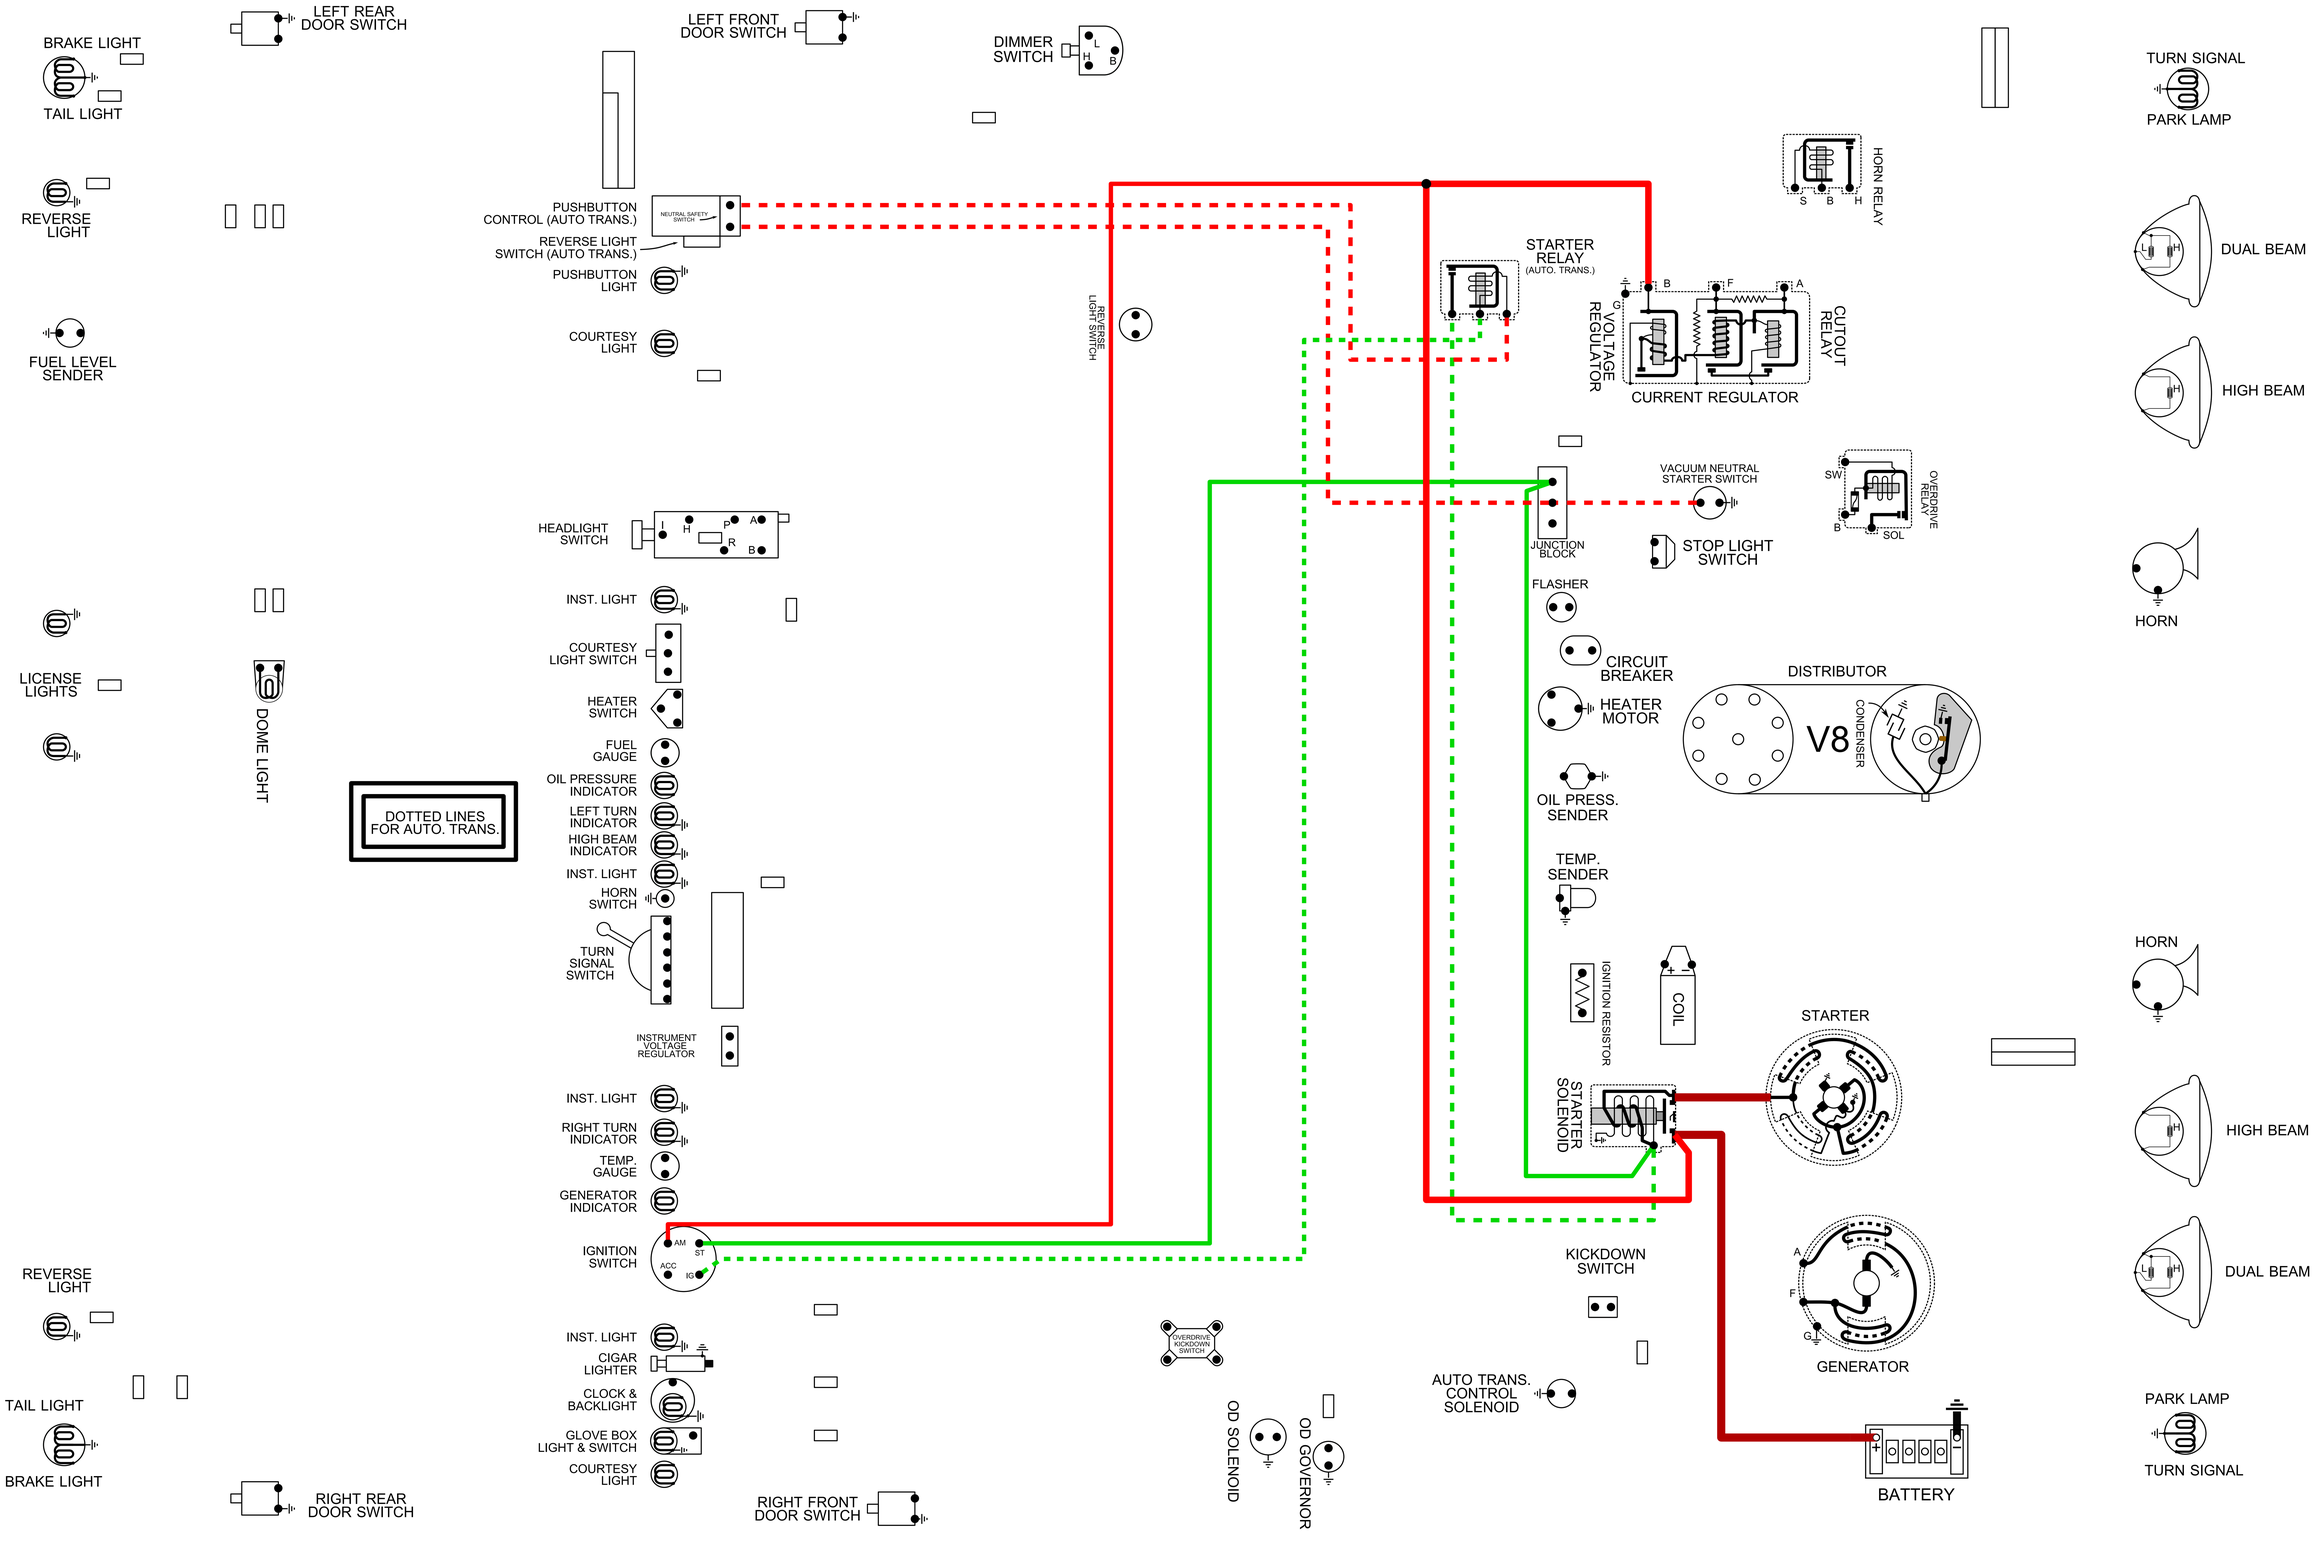

CINCO

1961 RAMBLER AMBASSADOR & CLASSIC V8


CHARGING SYSTEM

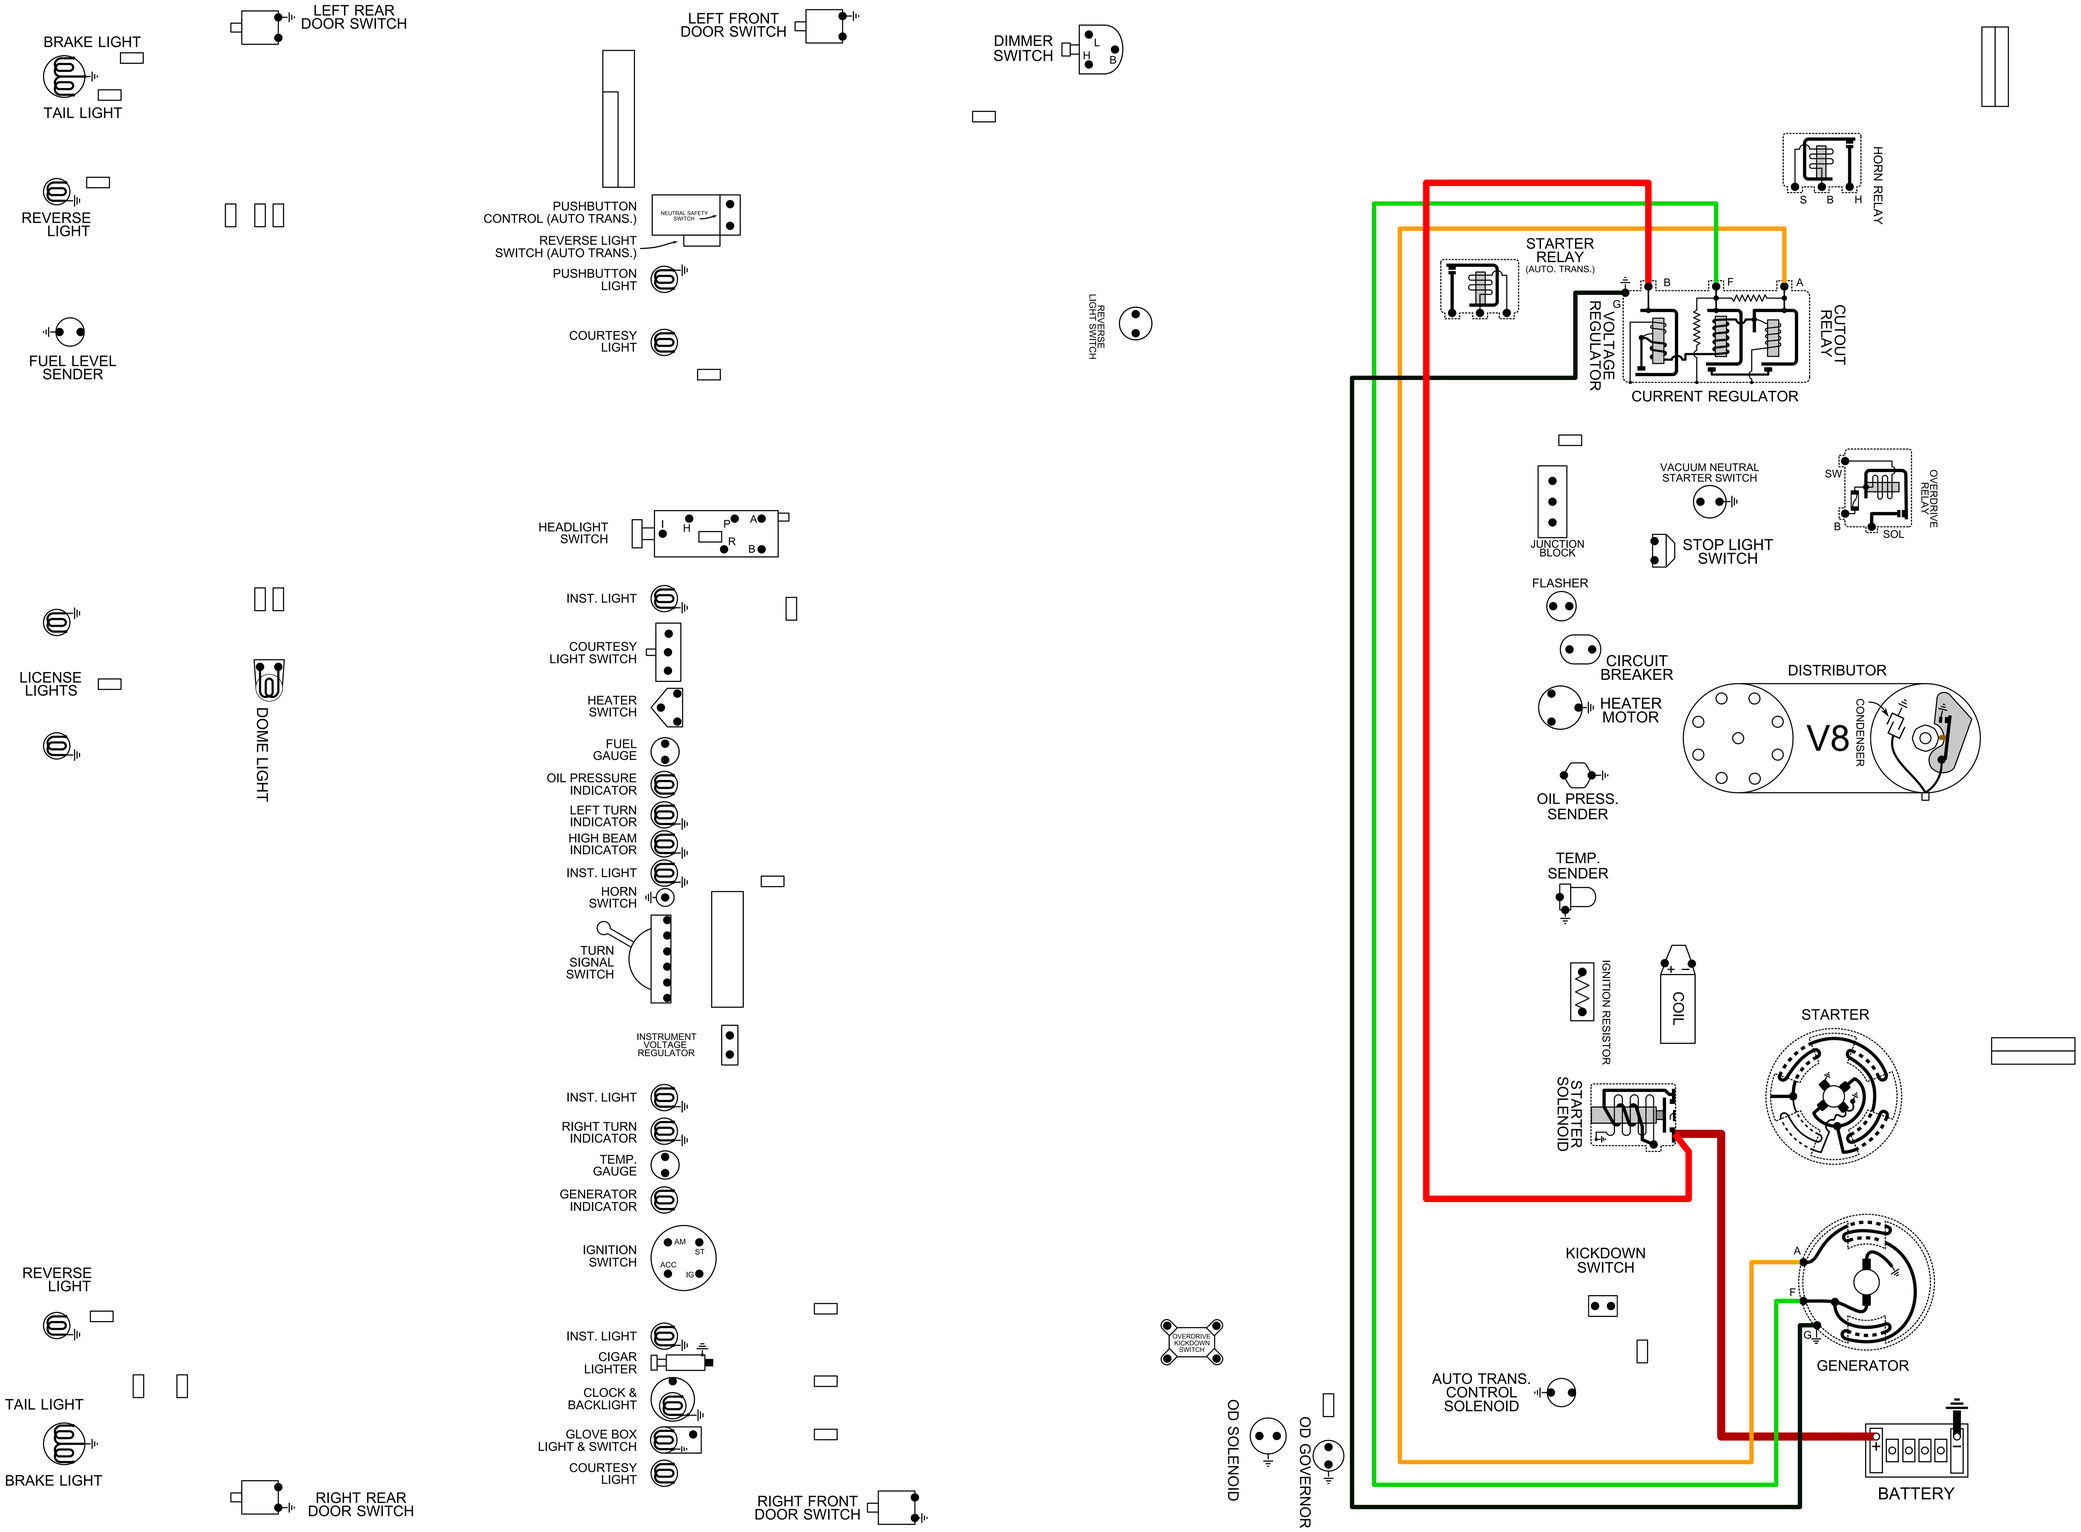

CINCO


1961 RAMBLER AMBASSADOR & CLASSIC V8

HEADLIGHTS

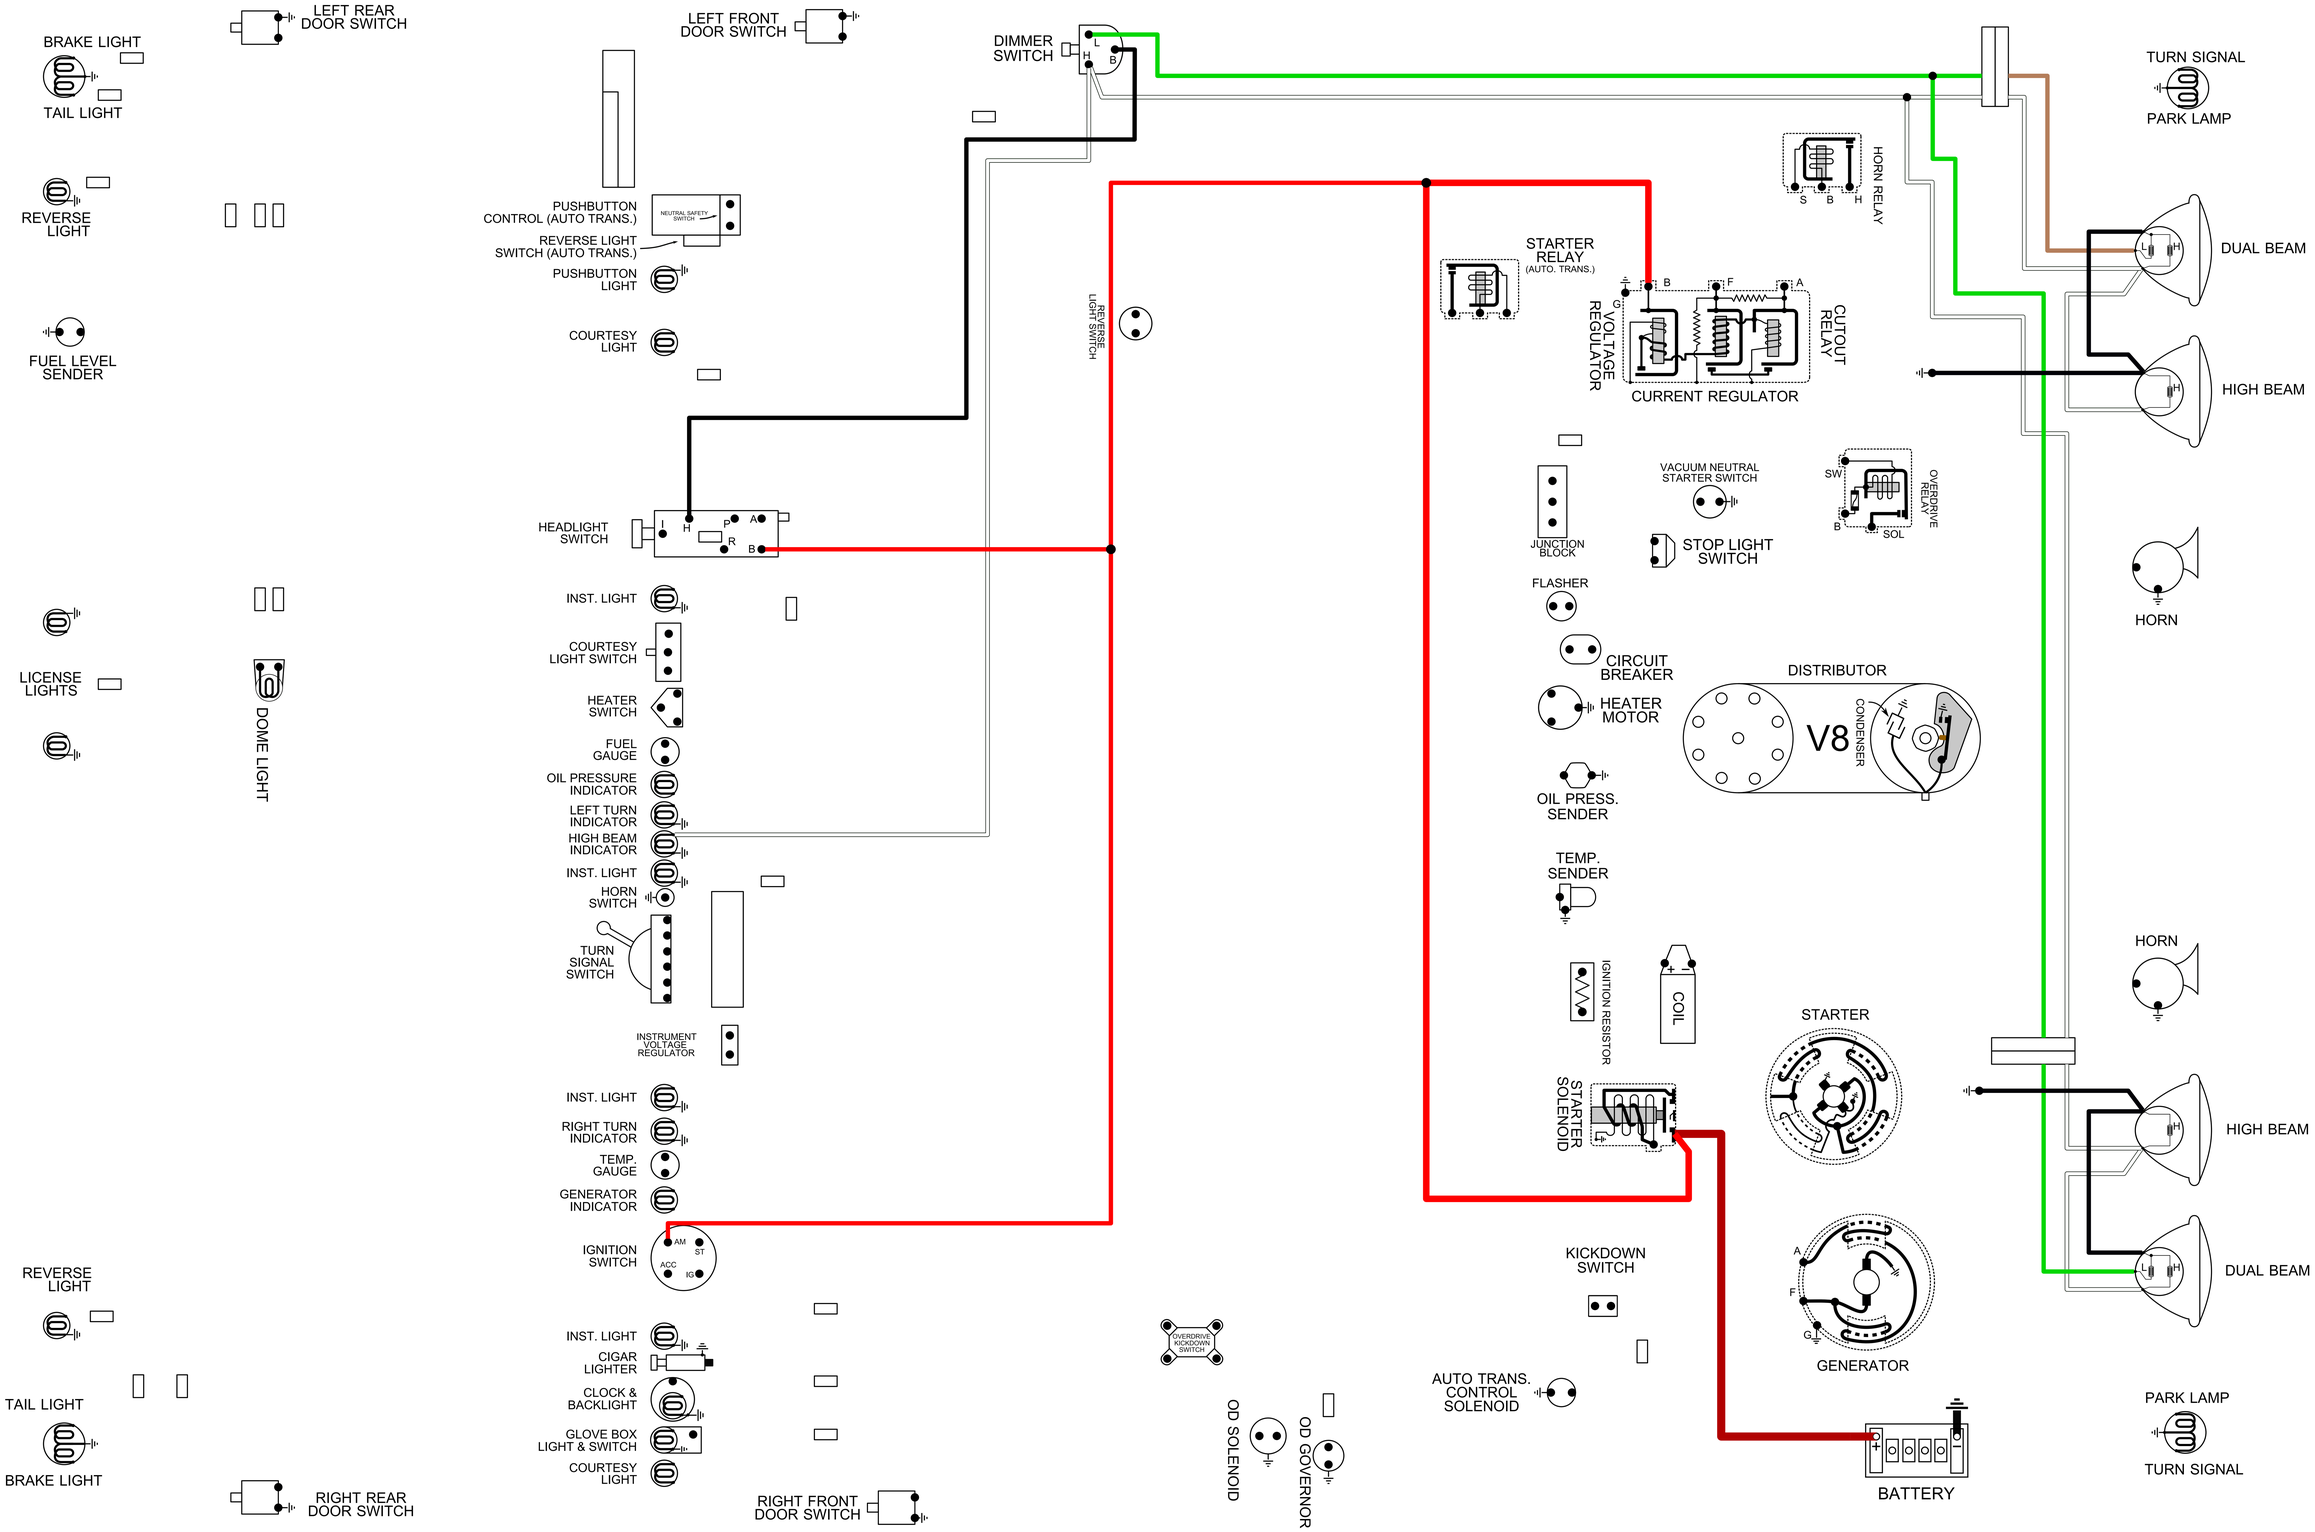

1961 RAMBLER AMBASSADOR & CLASSIC V8


RUNNING LIGHTS

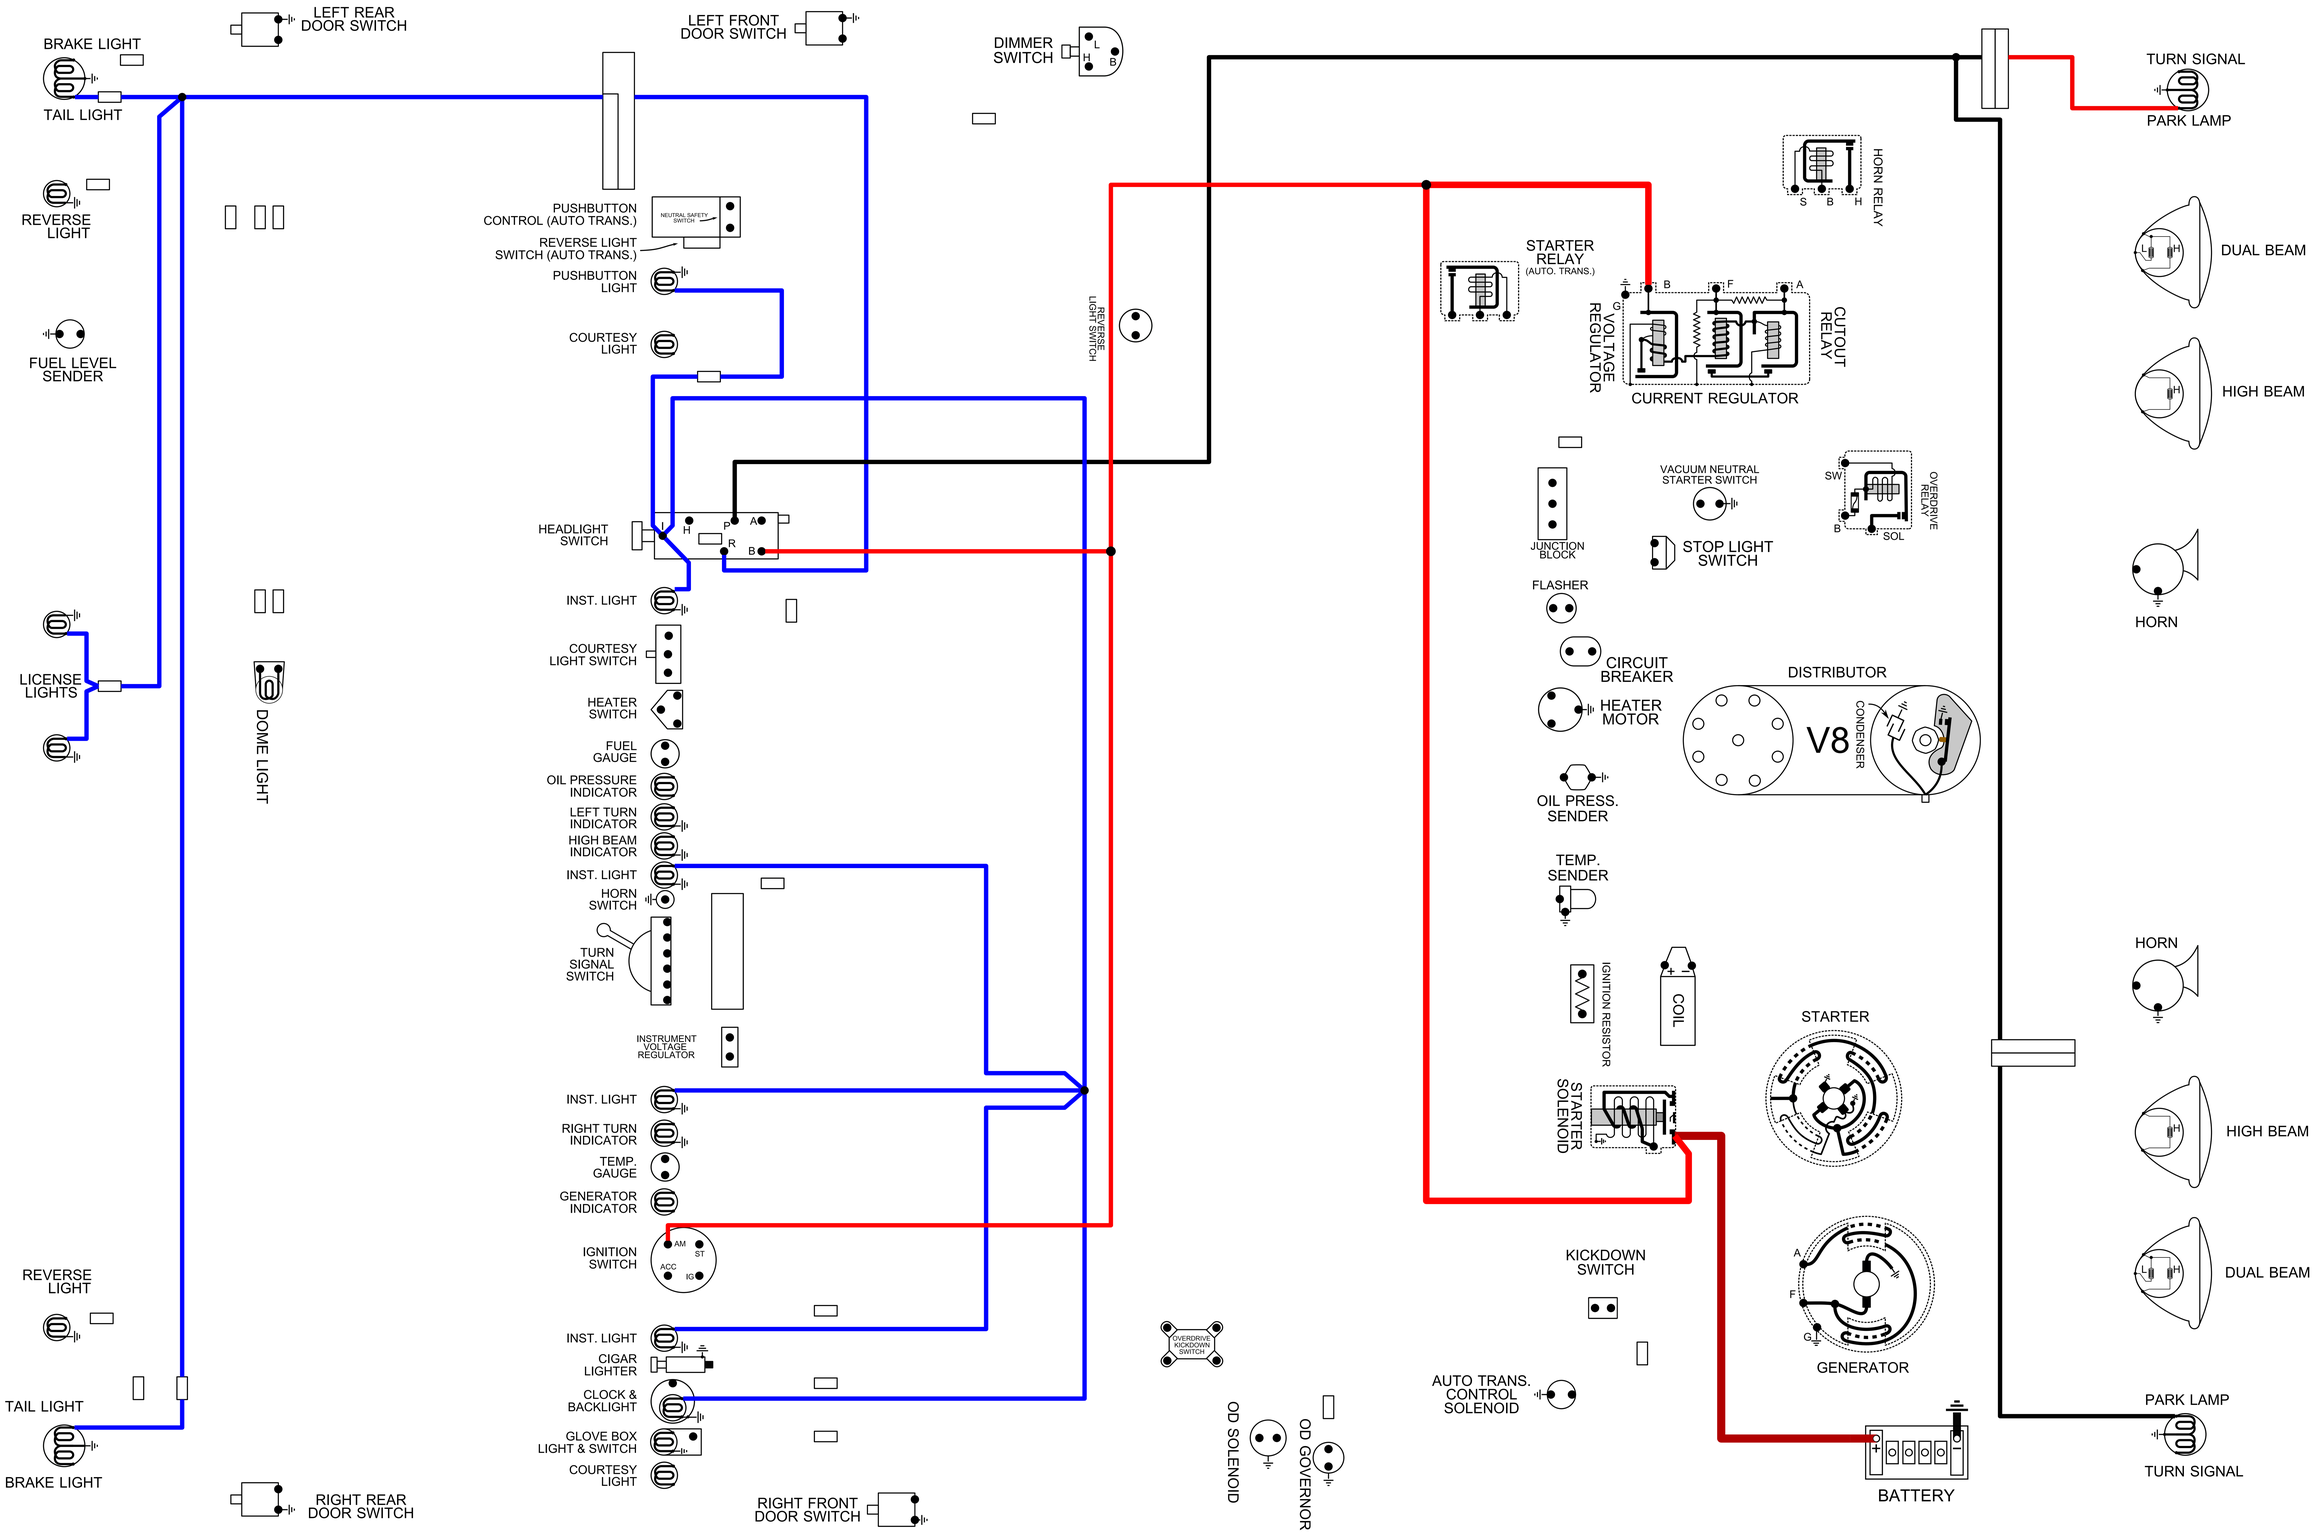

CINCO

1961 RAMBLER AMBASSADOR & CLASSIC V8


BRAKE LIGHTS

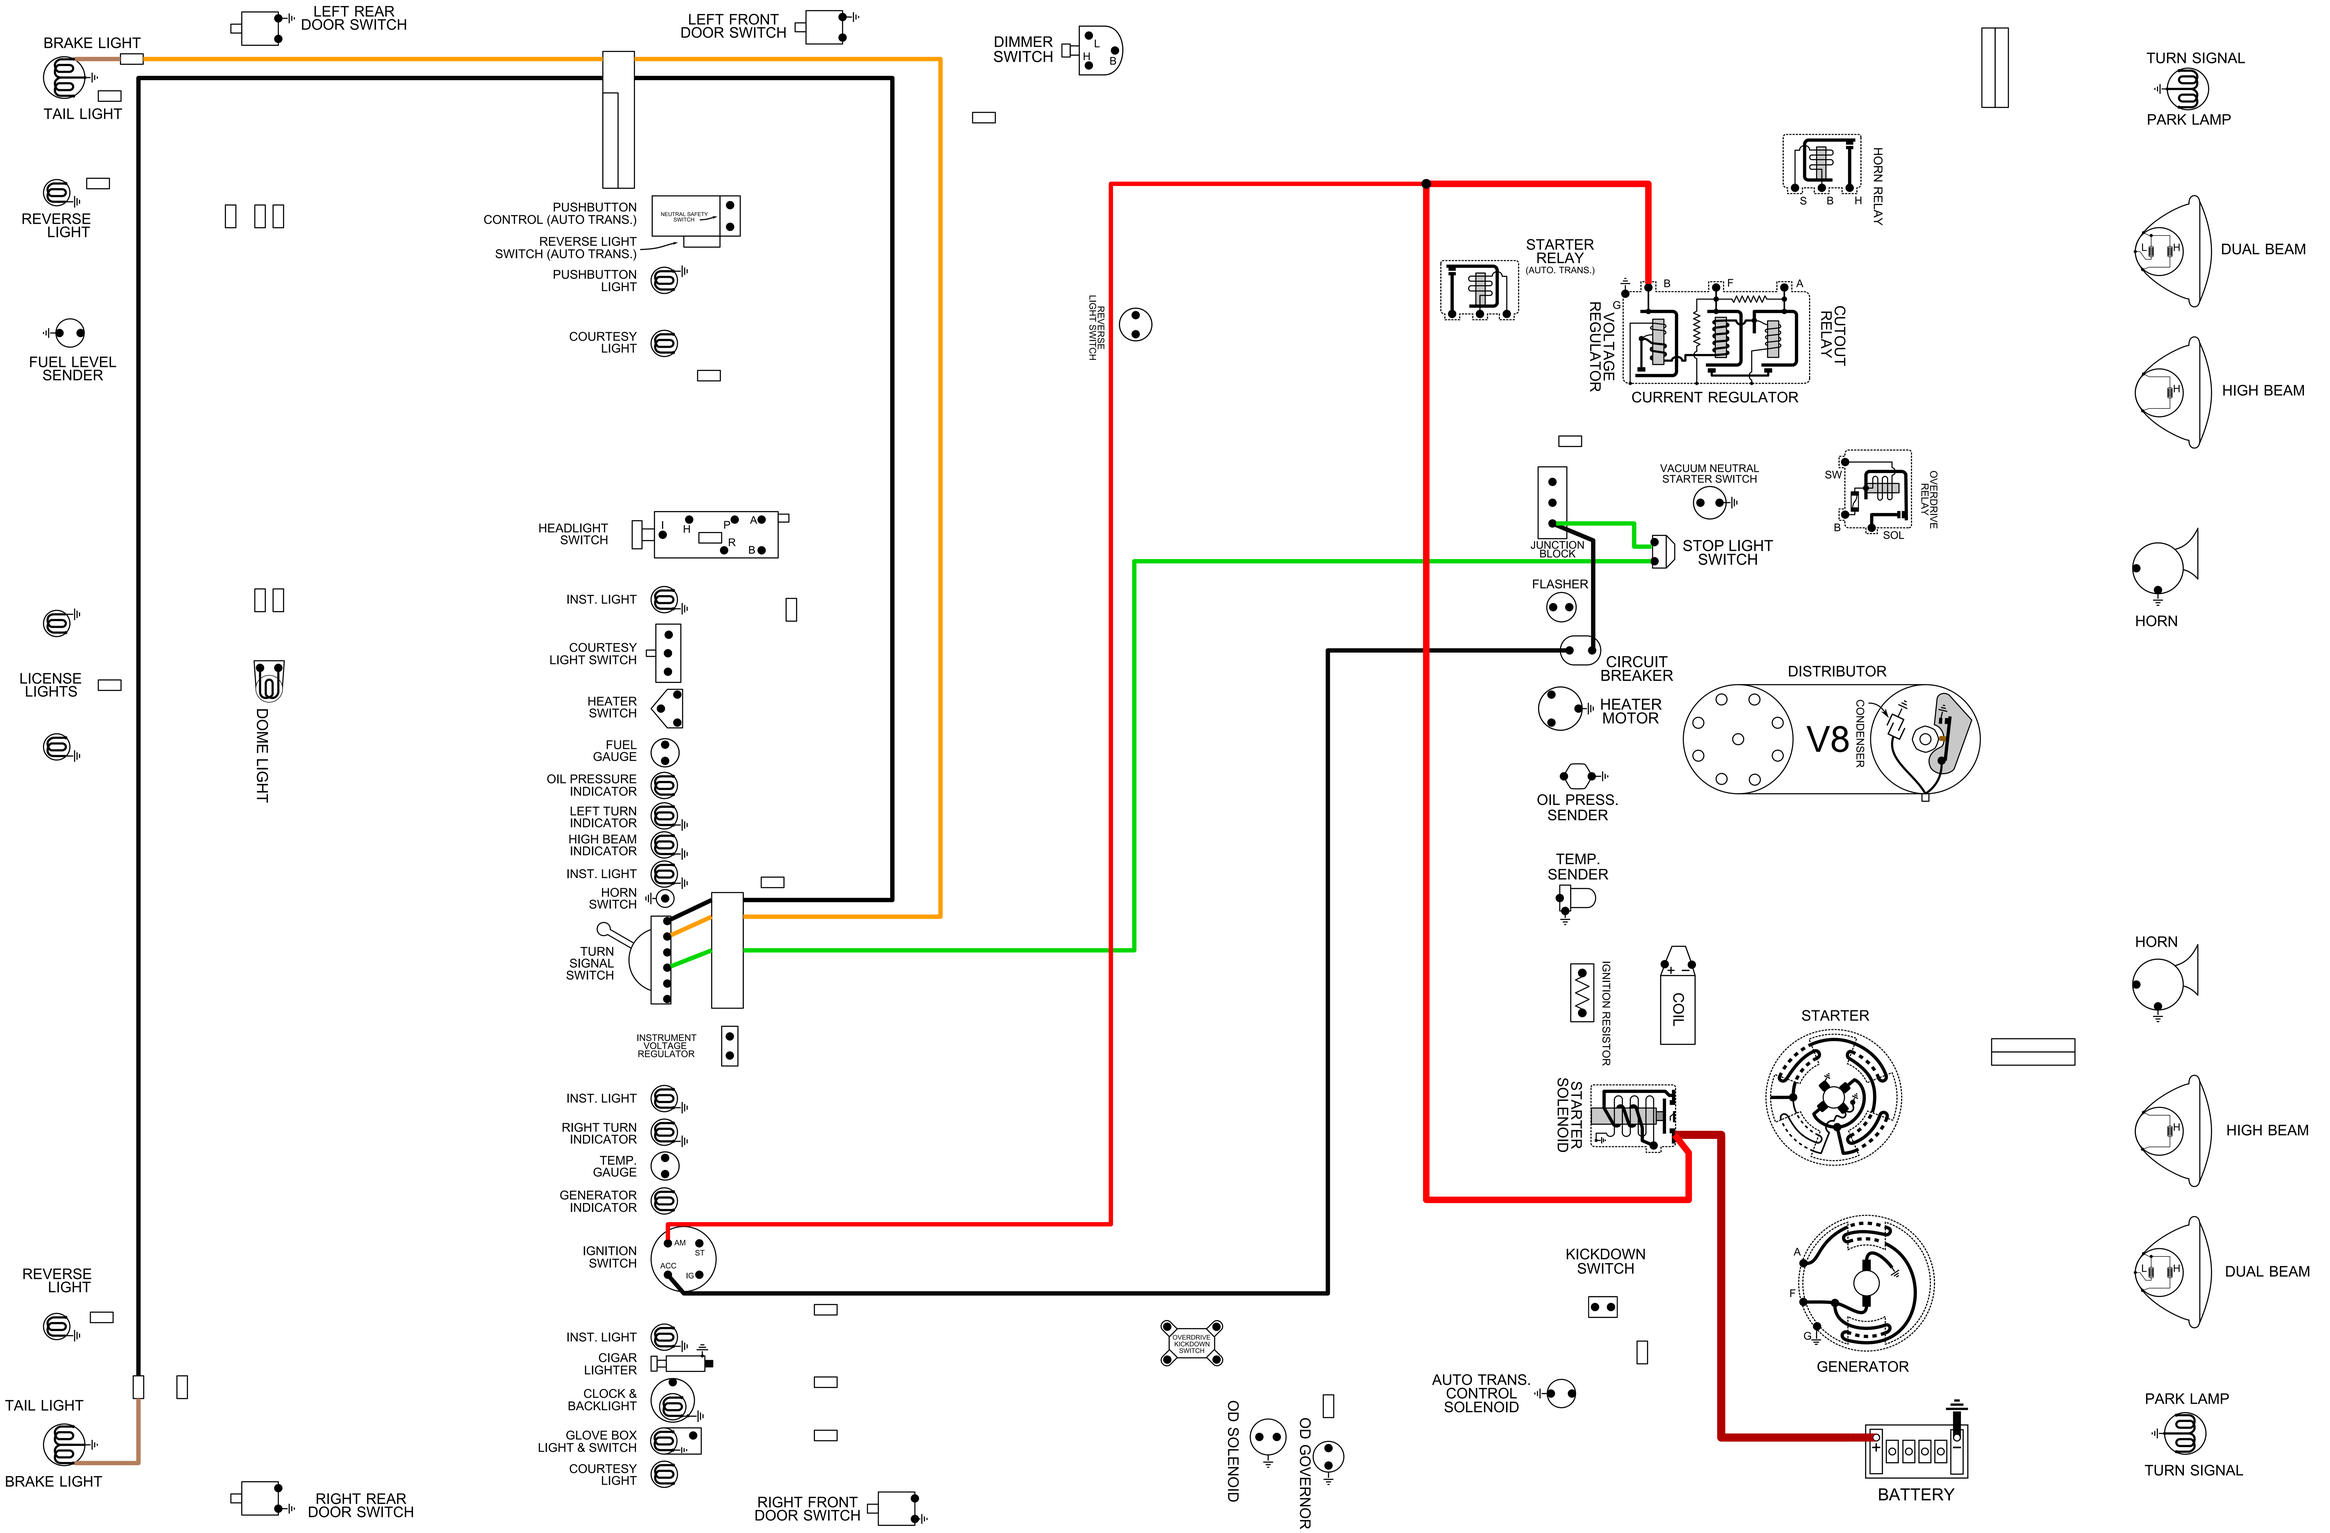

CINCO

1961 RAMBLER AMBASSADOR & CLASSIC V8


TURN SIGNALS

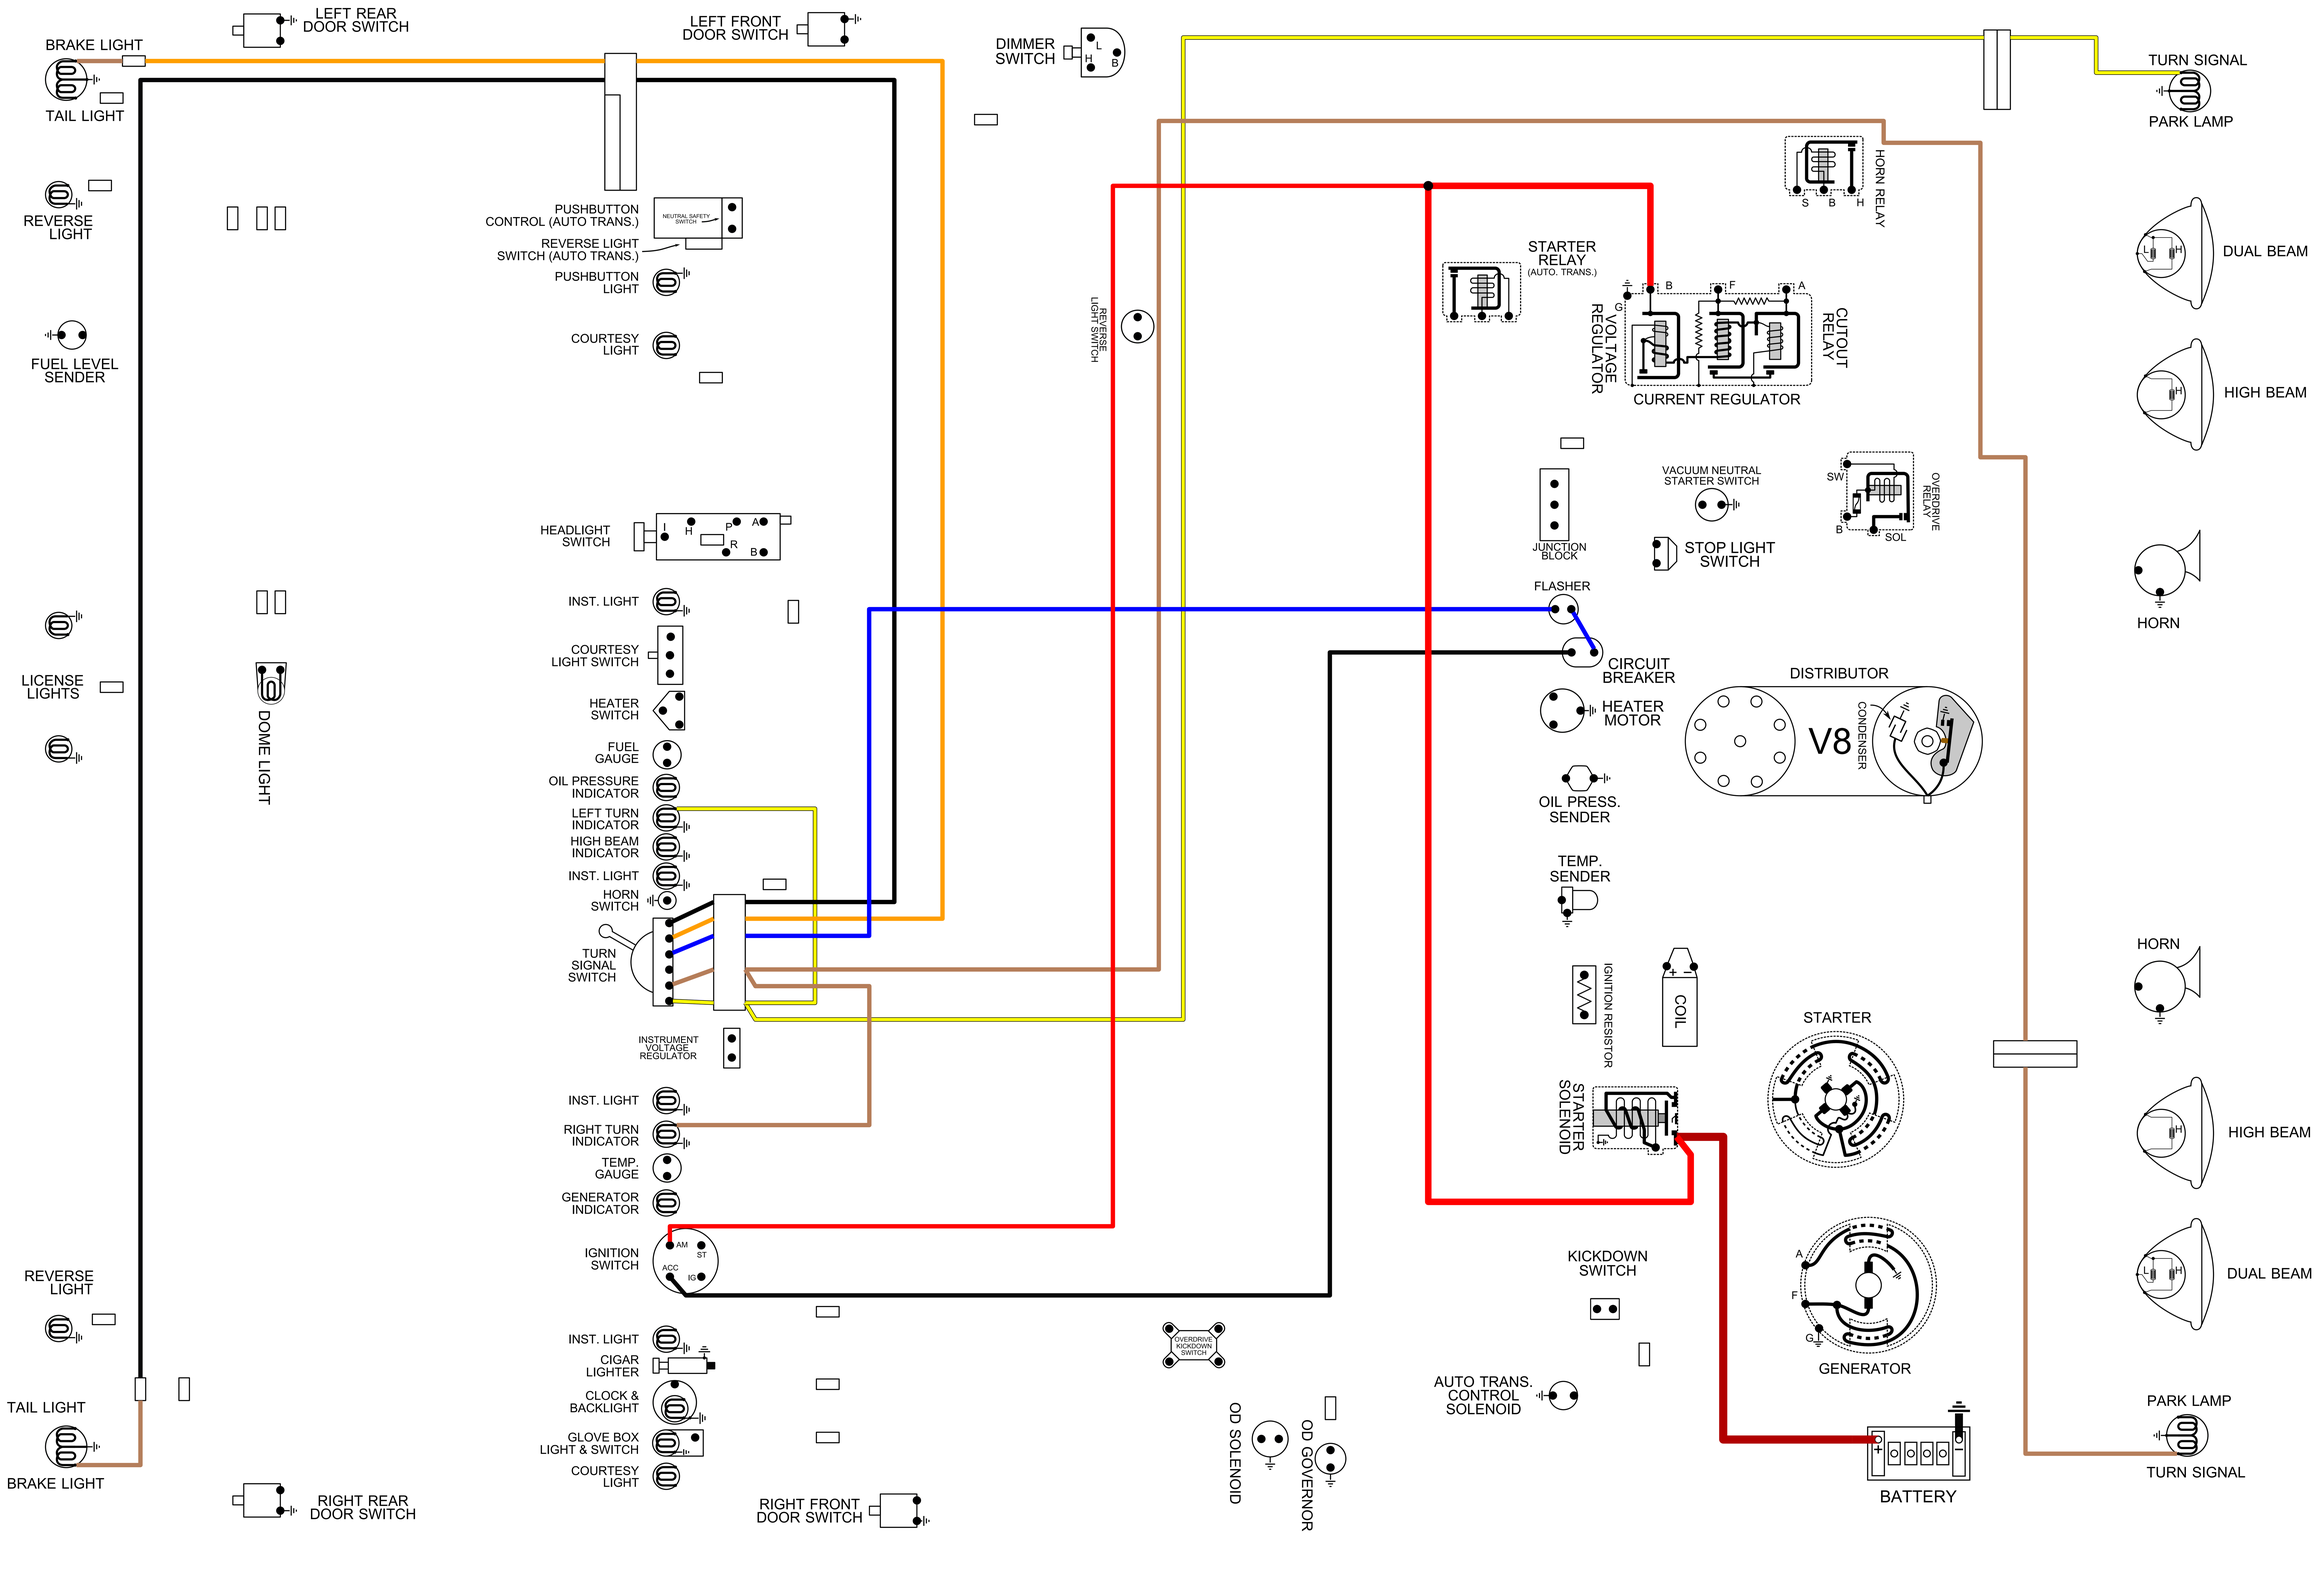

CINCO

1961 RAMBLER AMBASSADOR & CLASSIC V8


HEATER

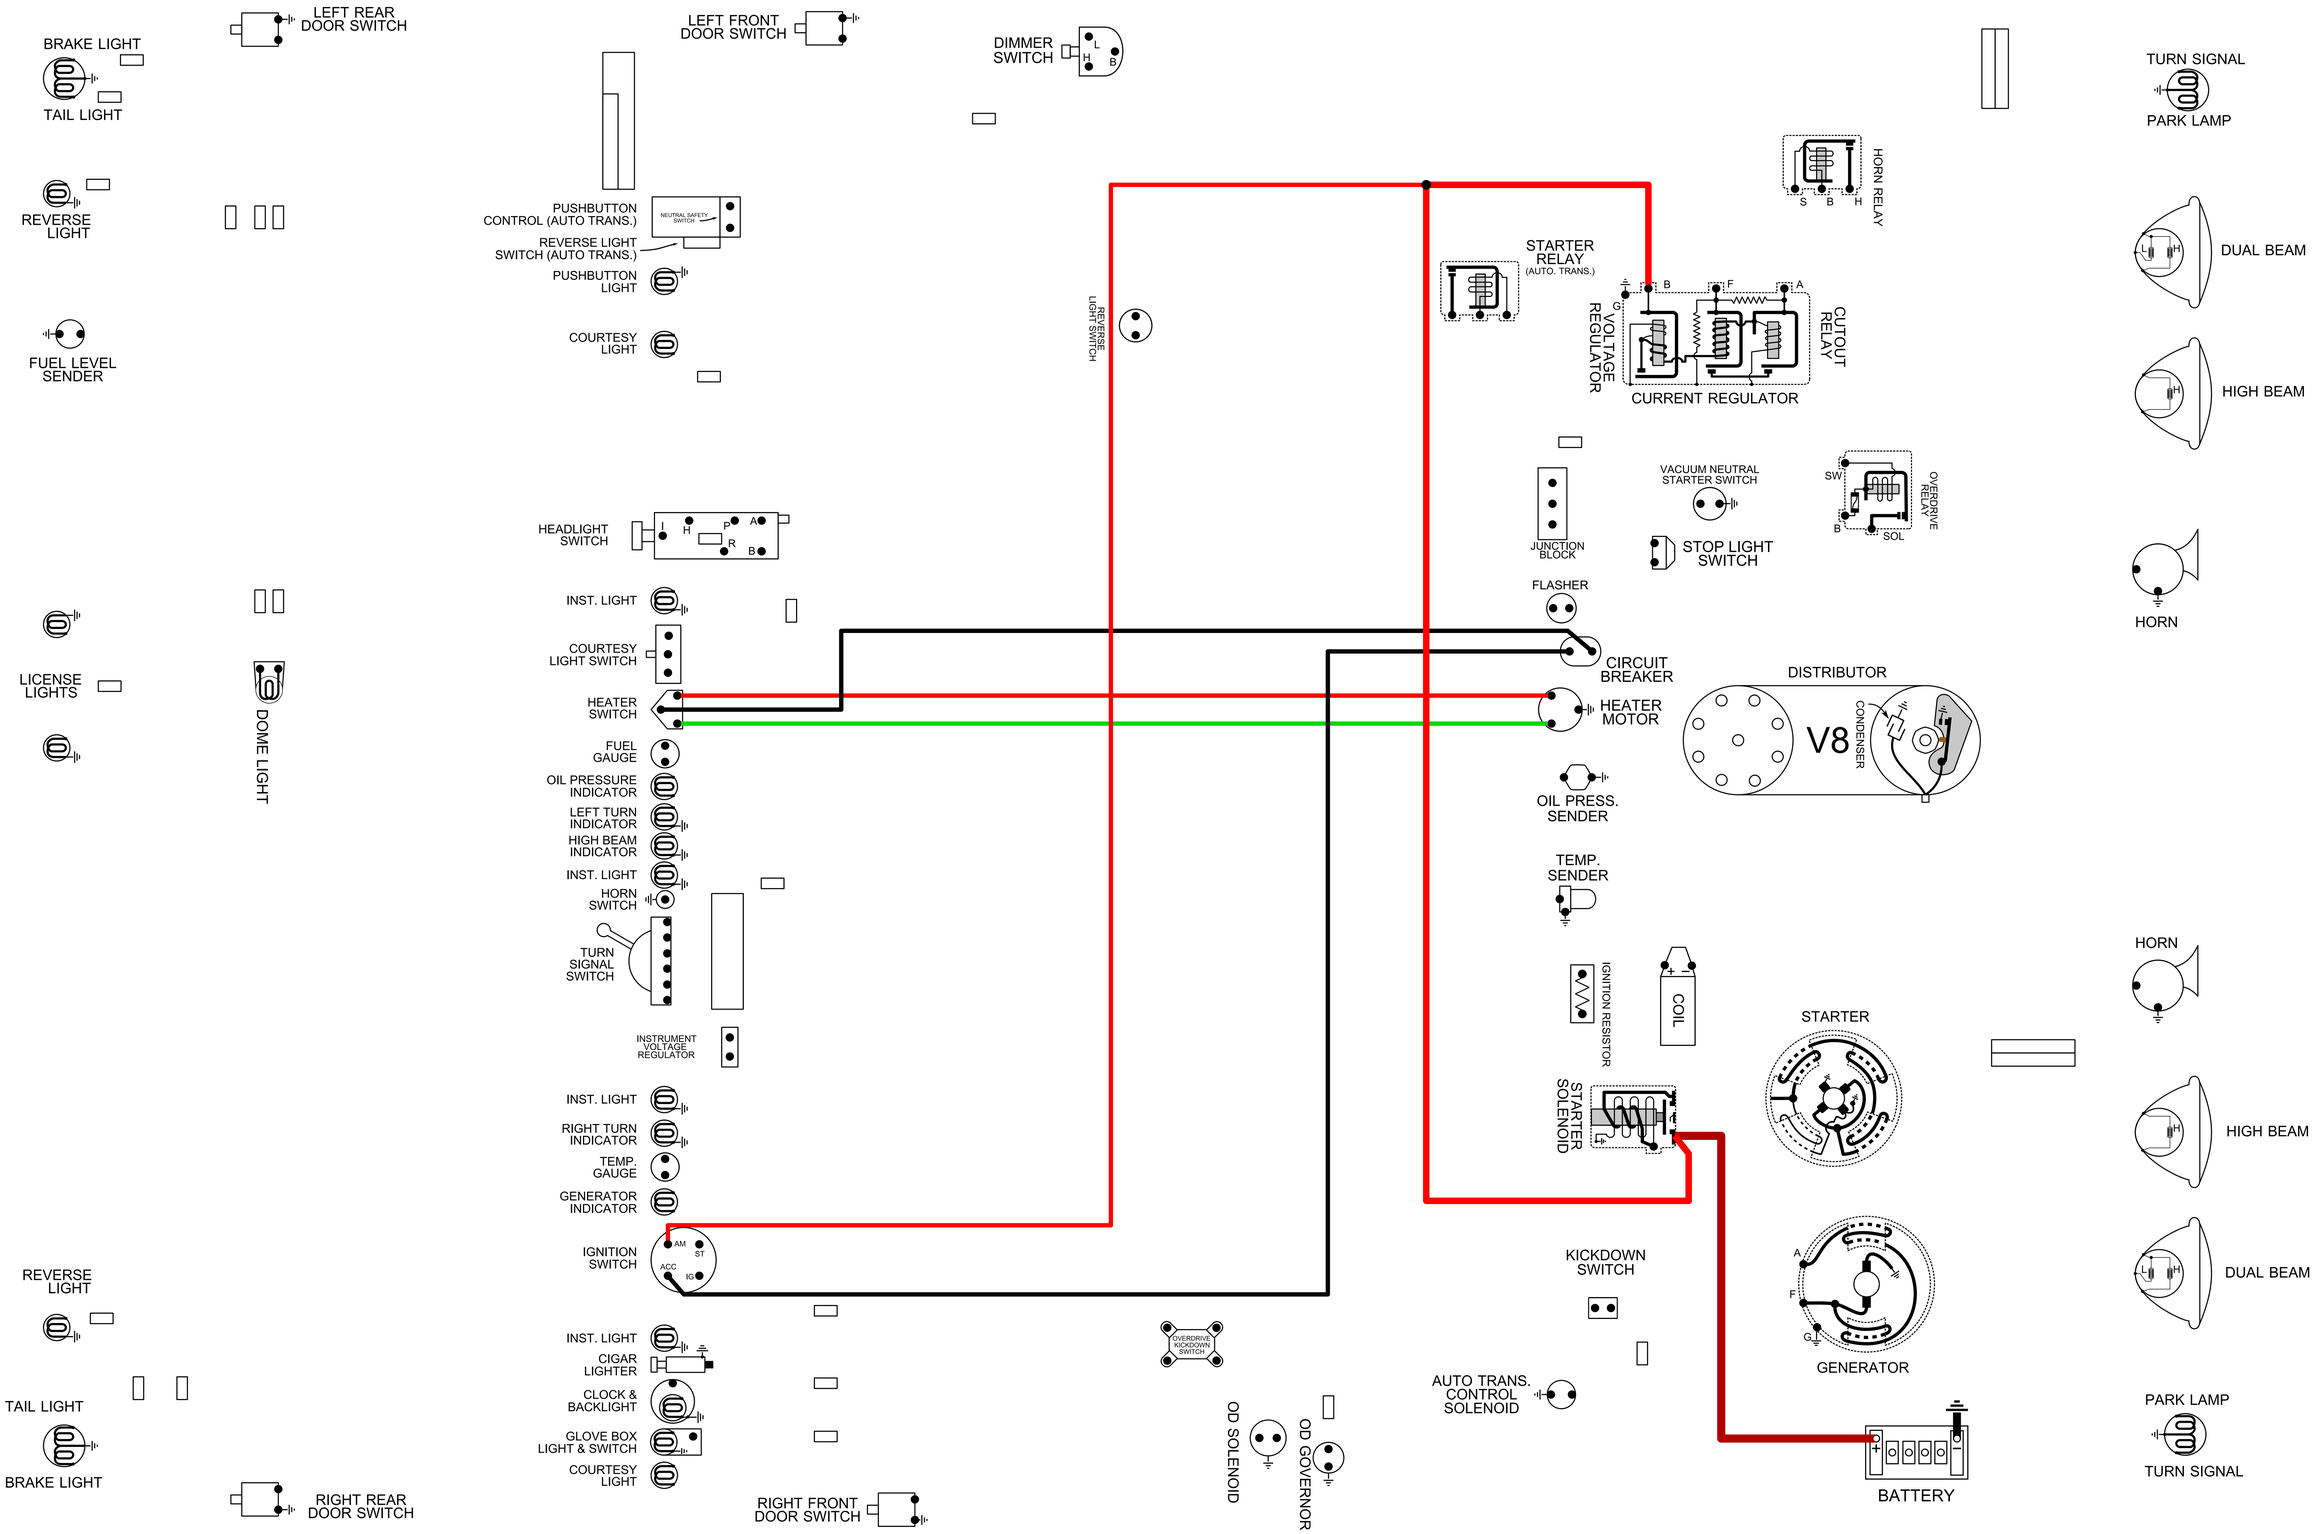

CINCO

1961 RAMBLER AMBASSADOR & CLASSIC V8


HORN

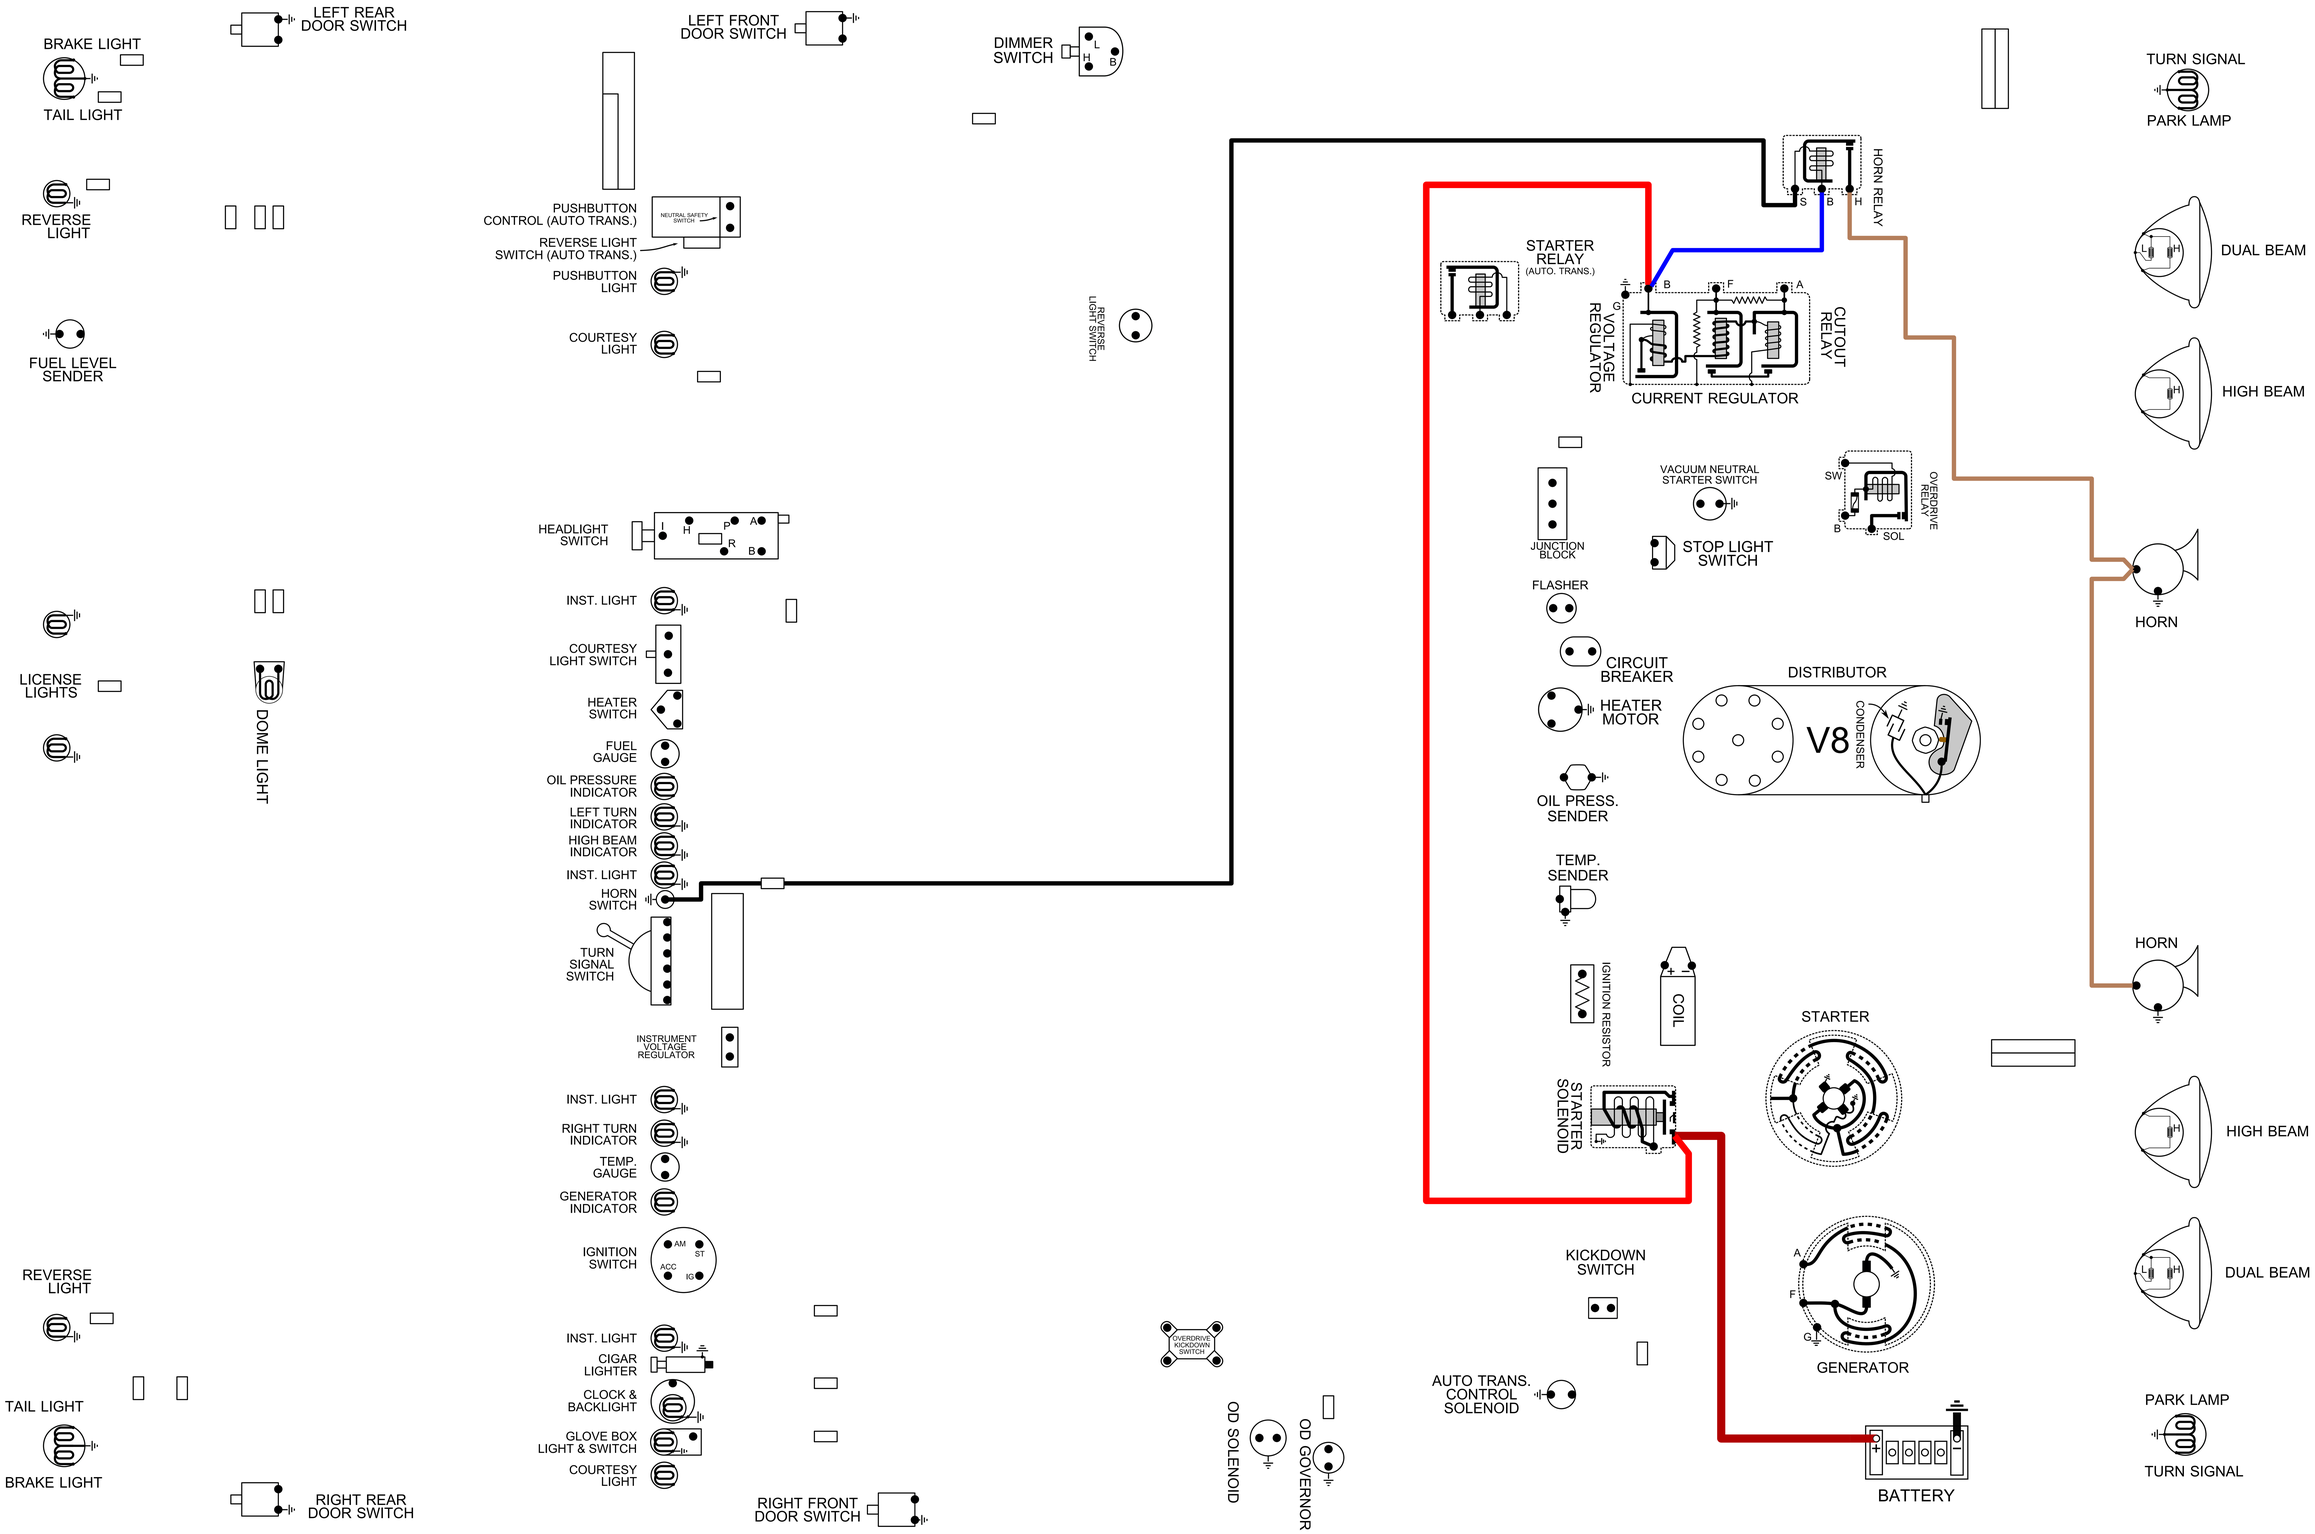

CINCO


1961 RAMBLER AMBASSADOR & CLASSIC V8

TRANSMISSION

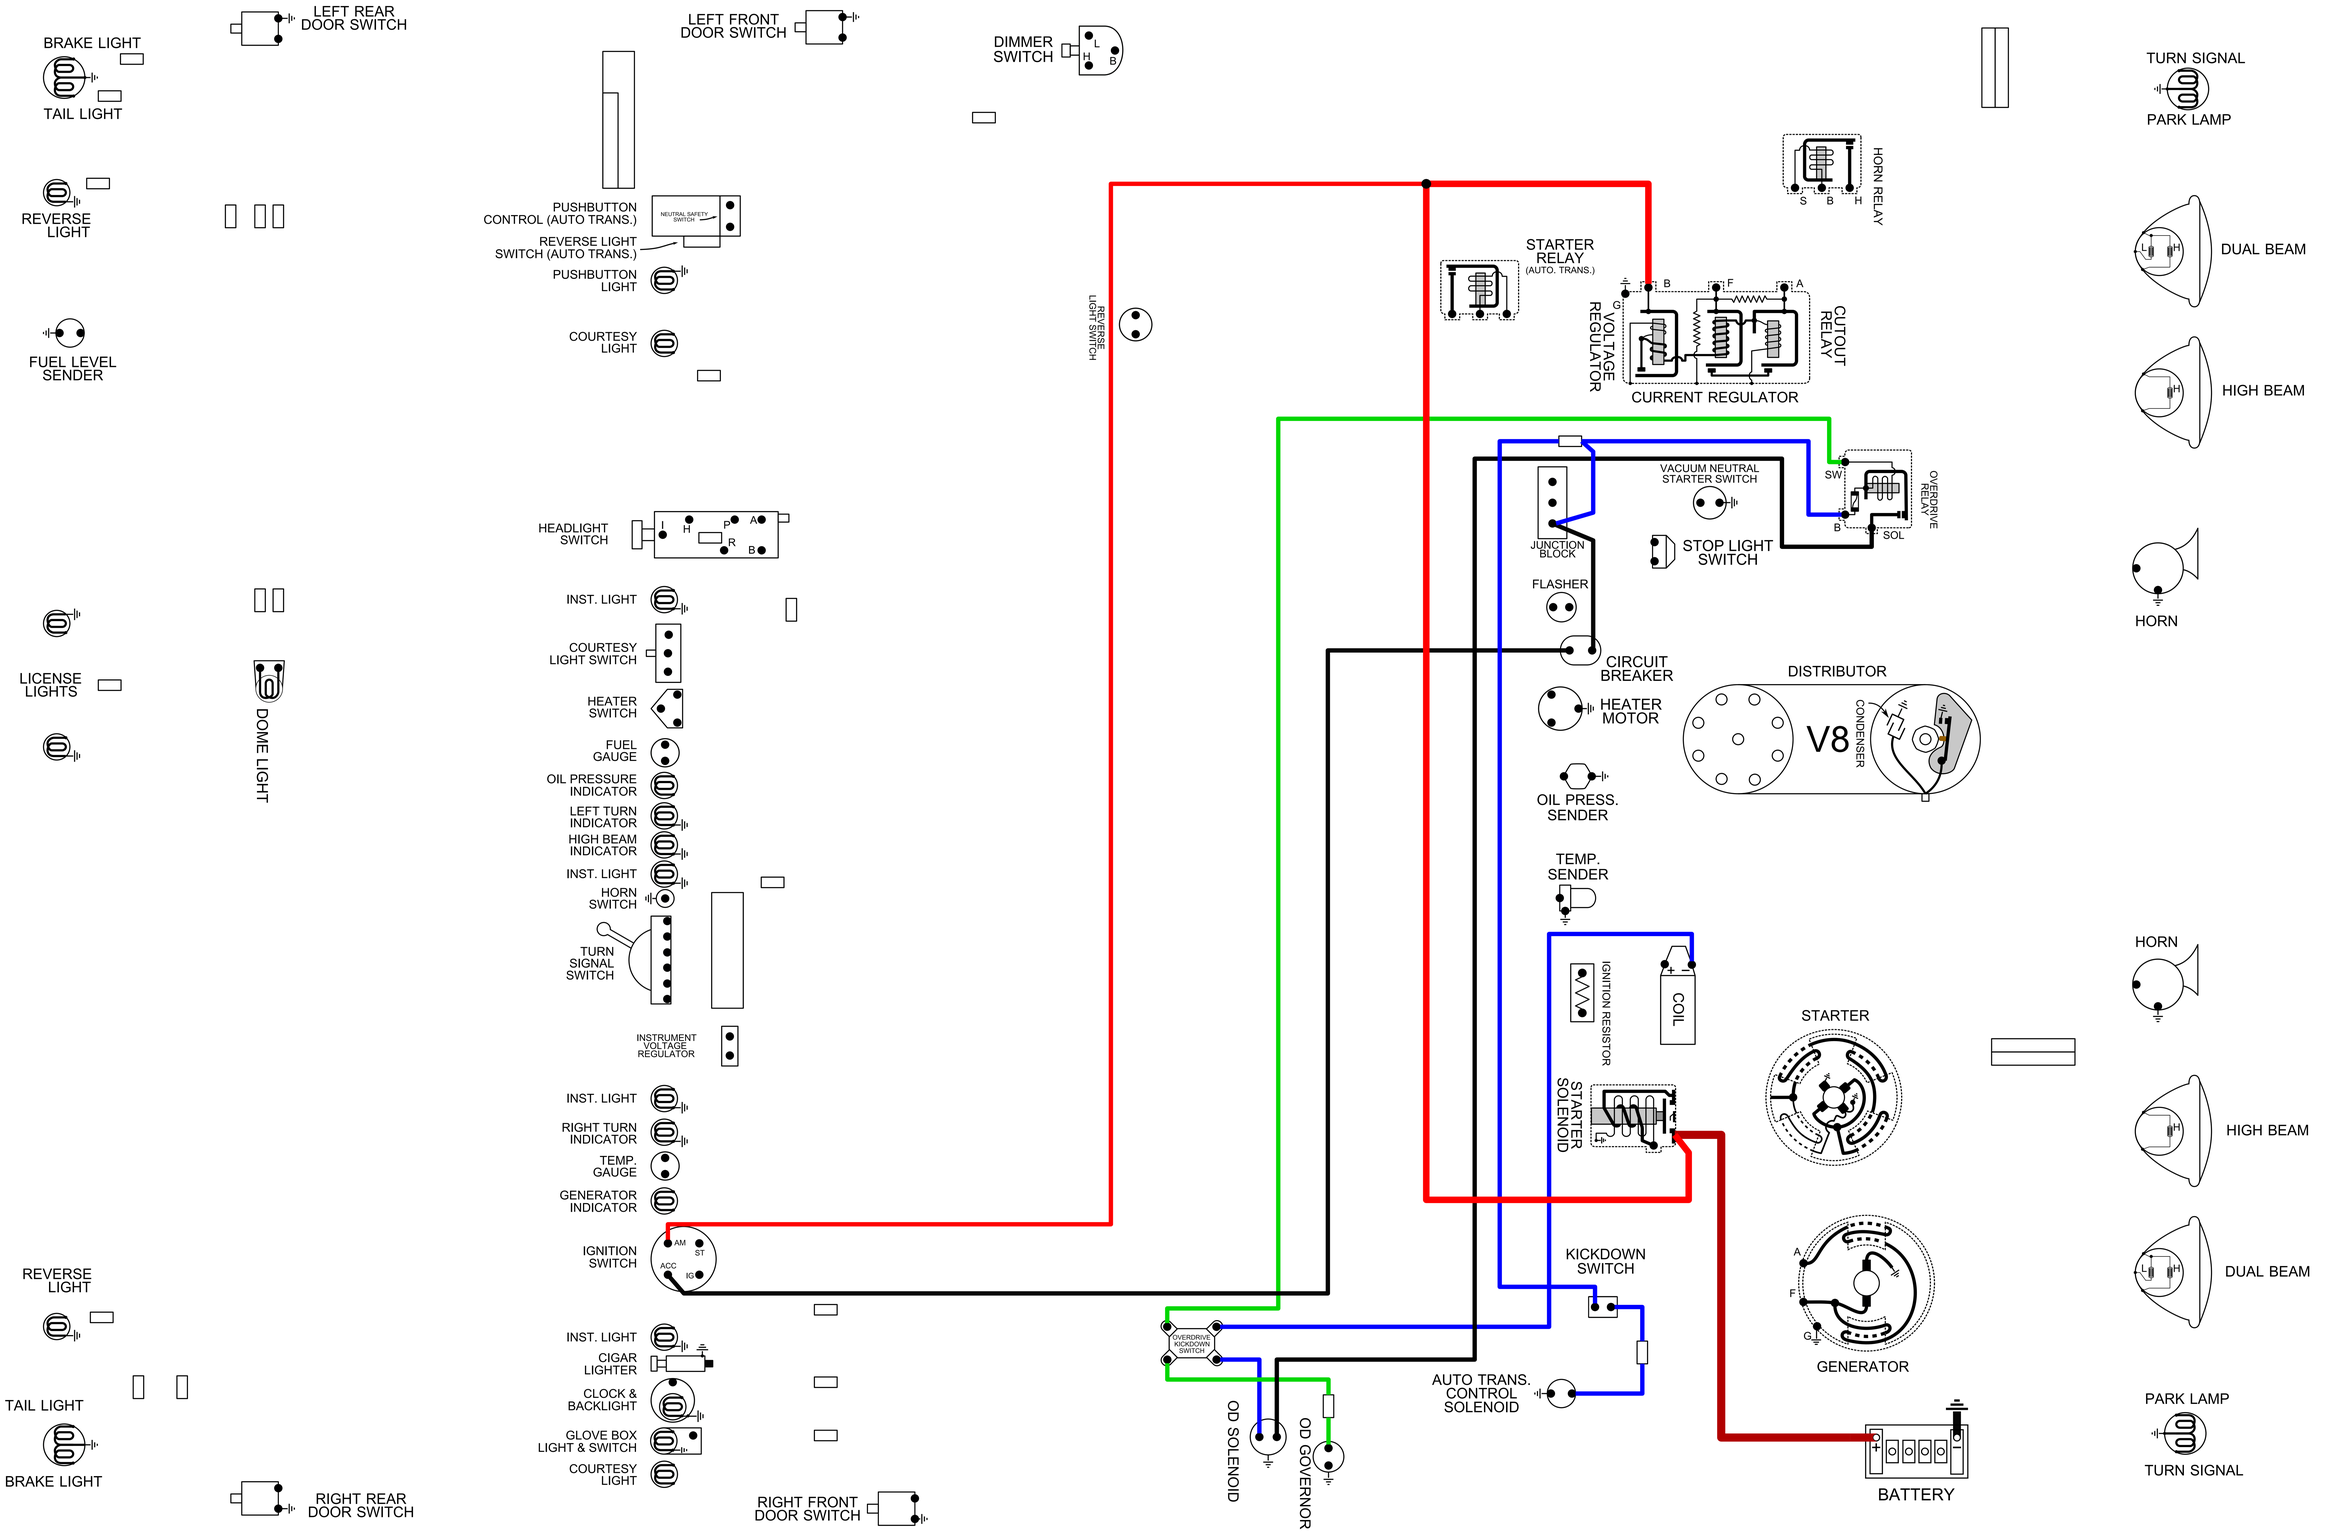

1961 RAMBLER AMBASSADOR & CLASSIC V8


GAUGES & WARNING LIGHTS

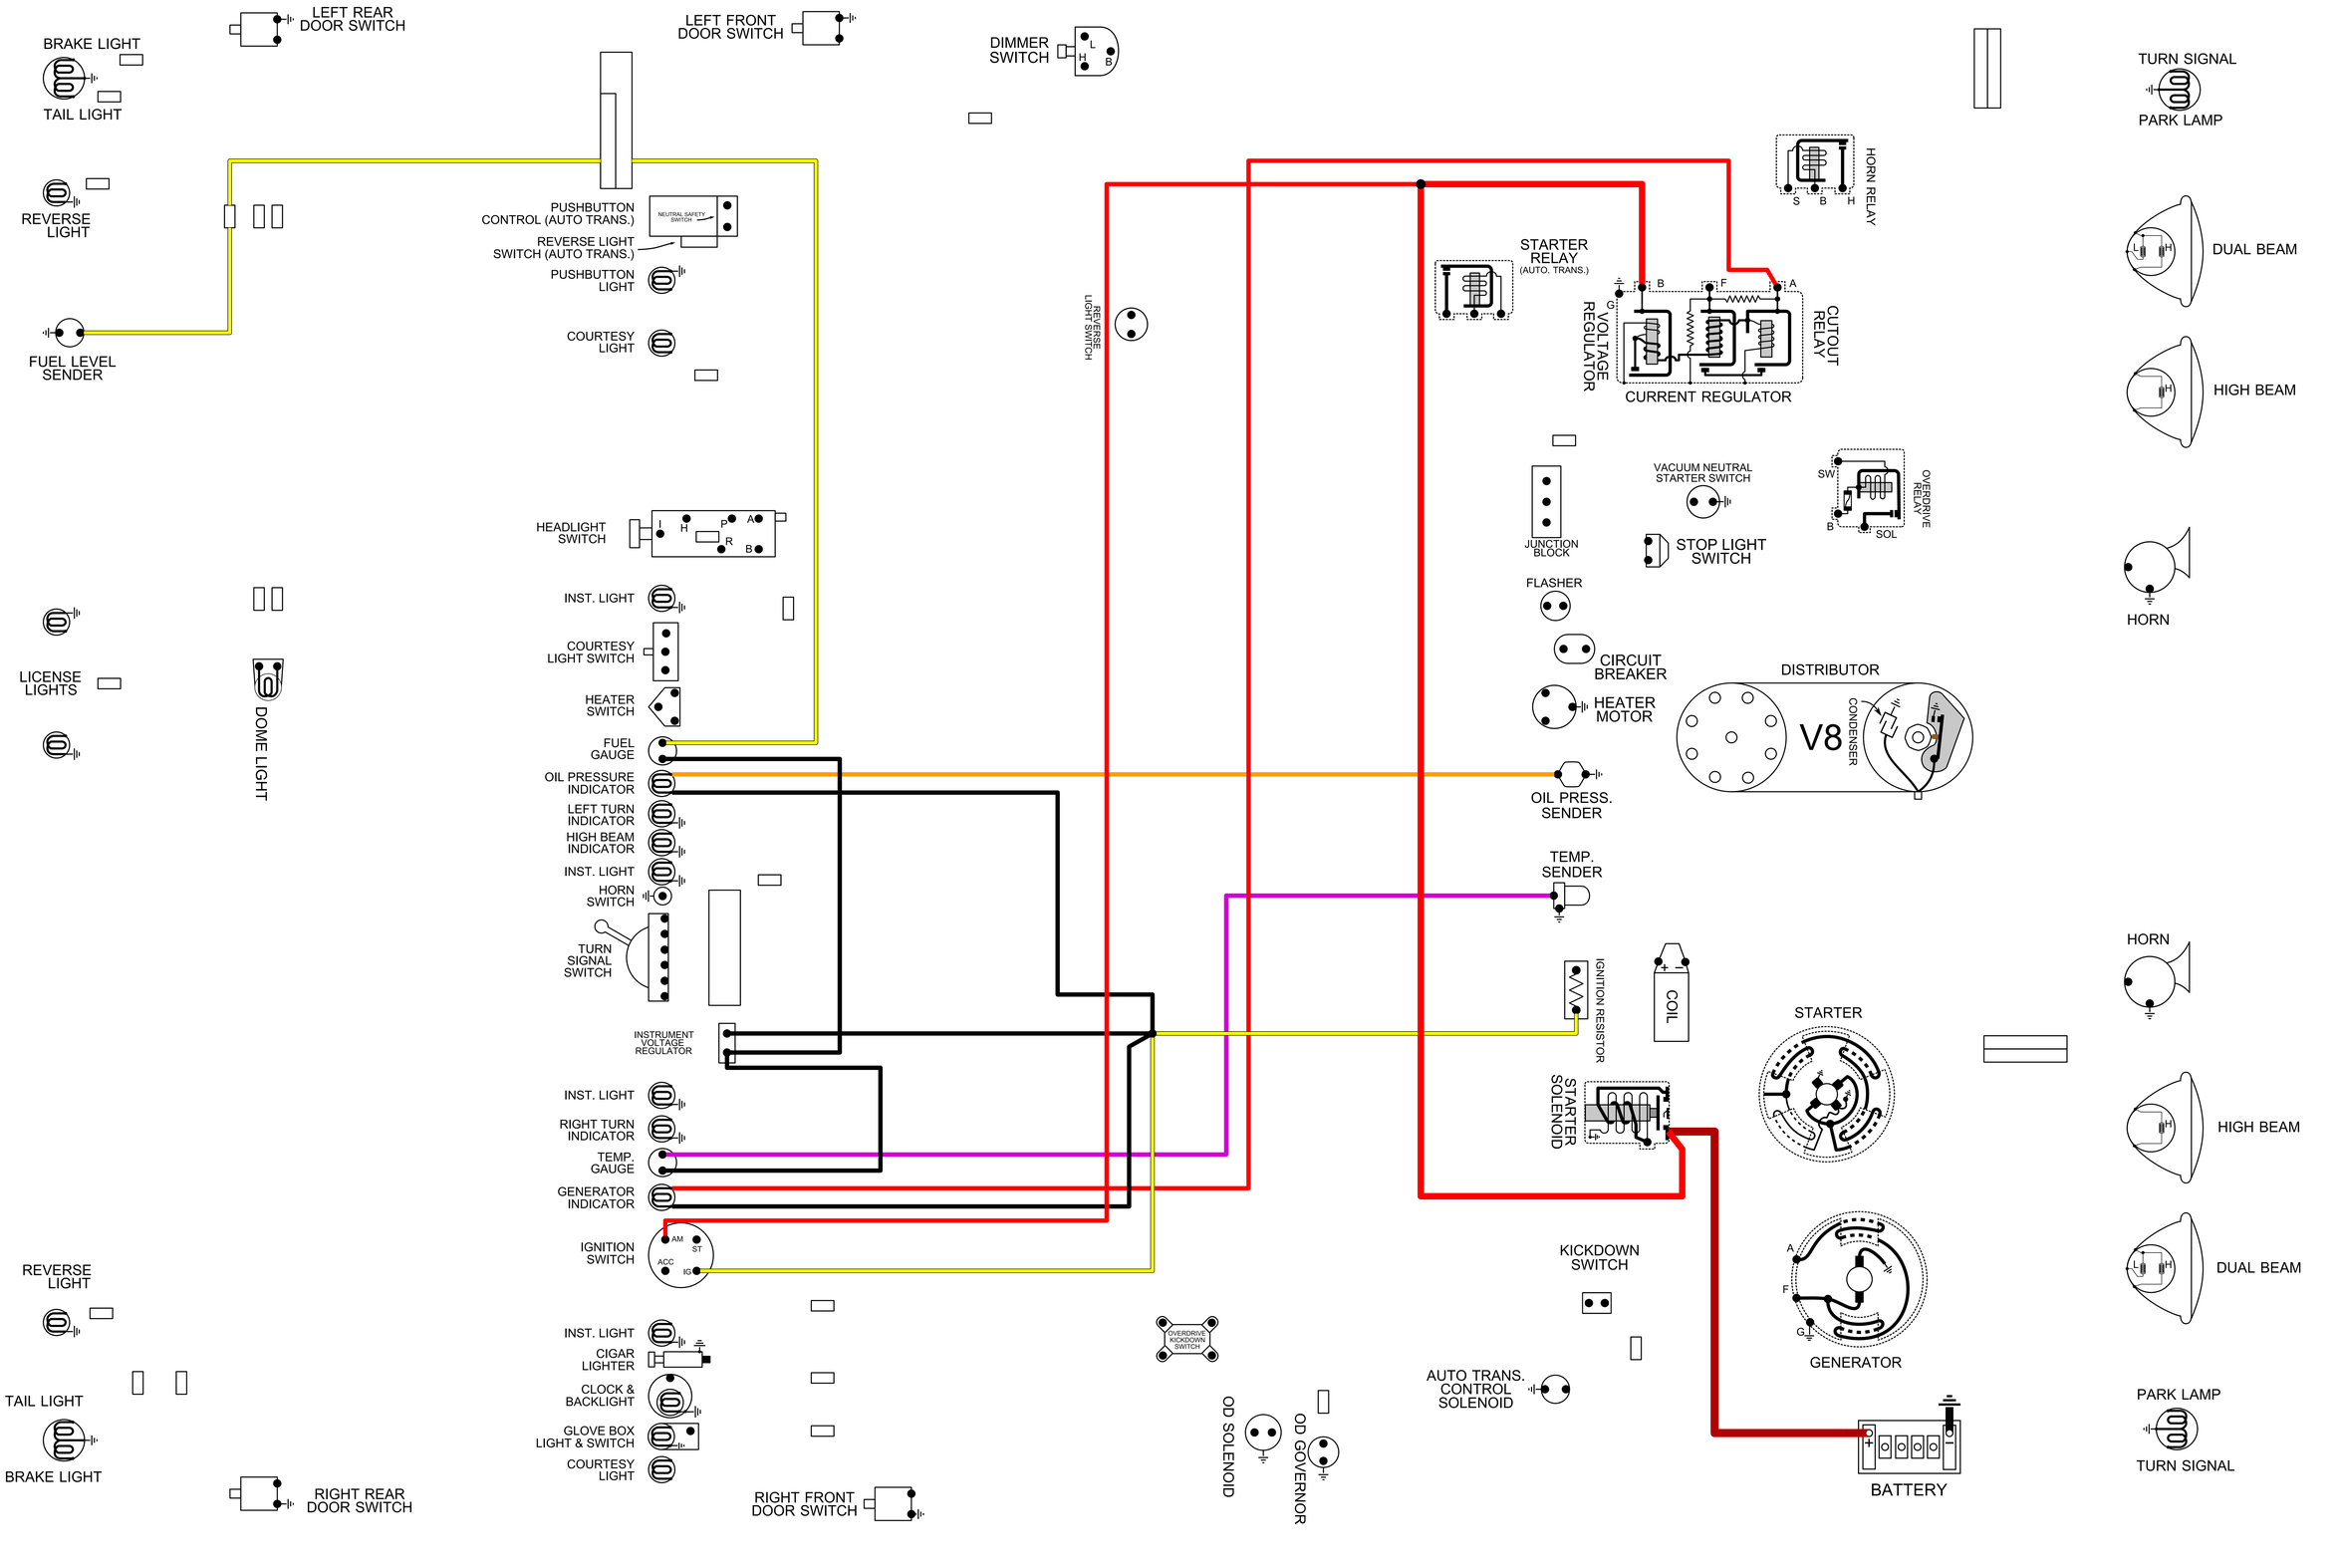

CINCO

1961 RAMBLER AMBASSADOR & CLASSIC V8

REVERSE LIGHTS

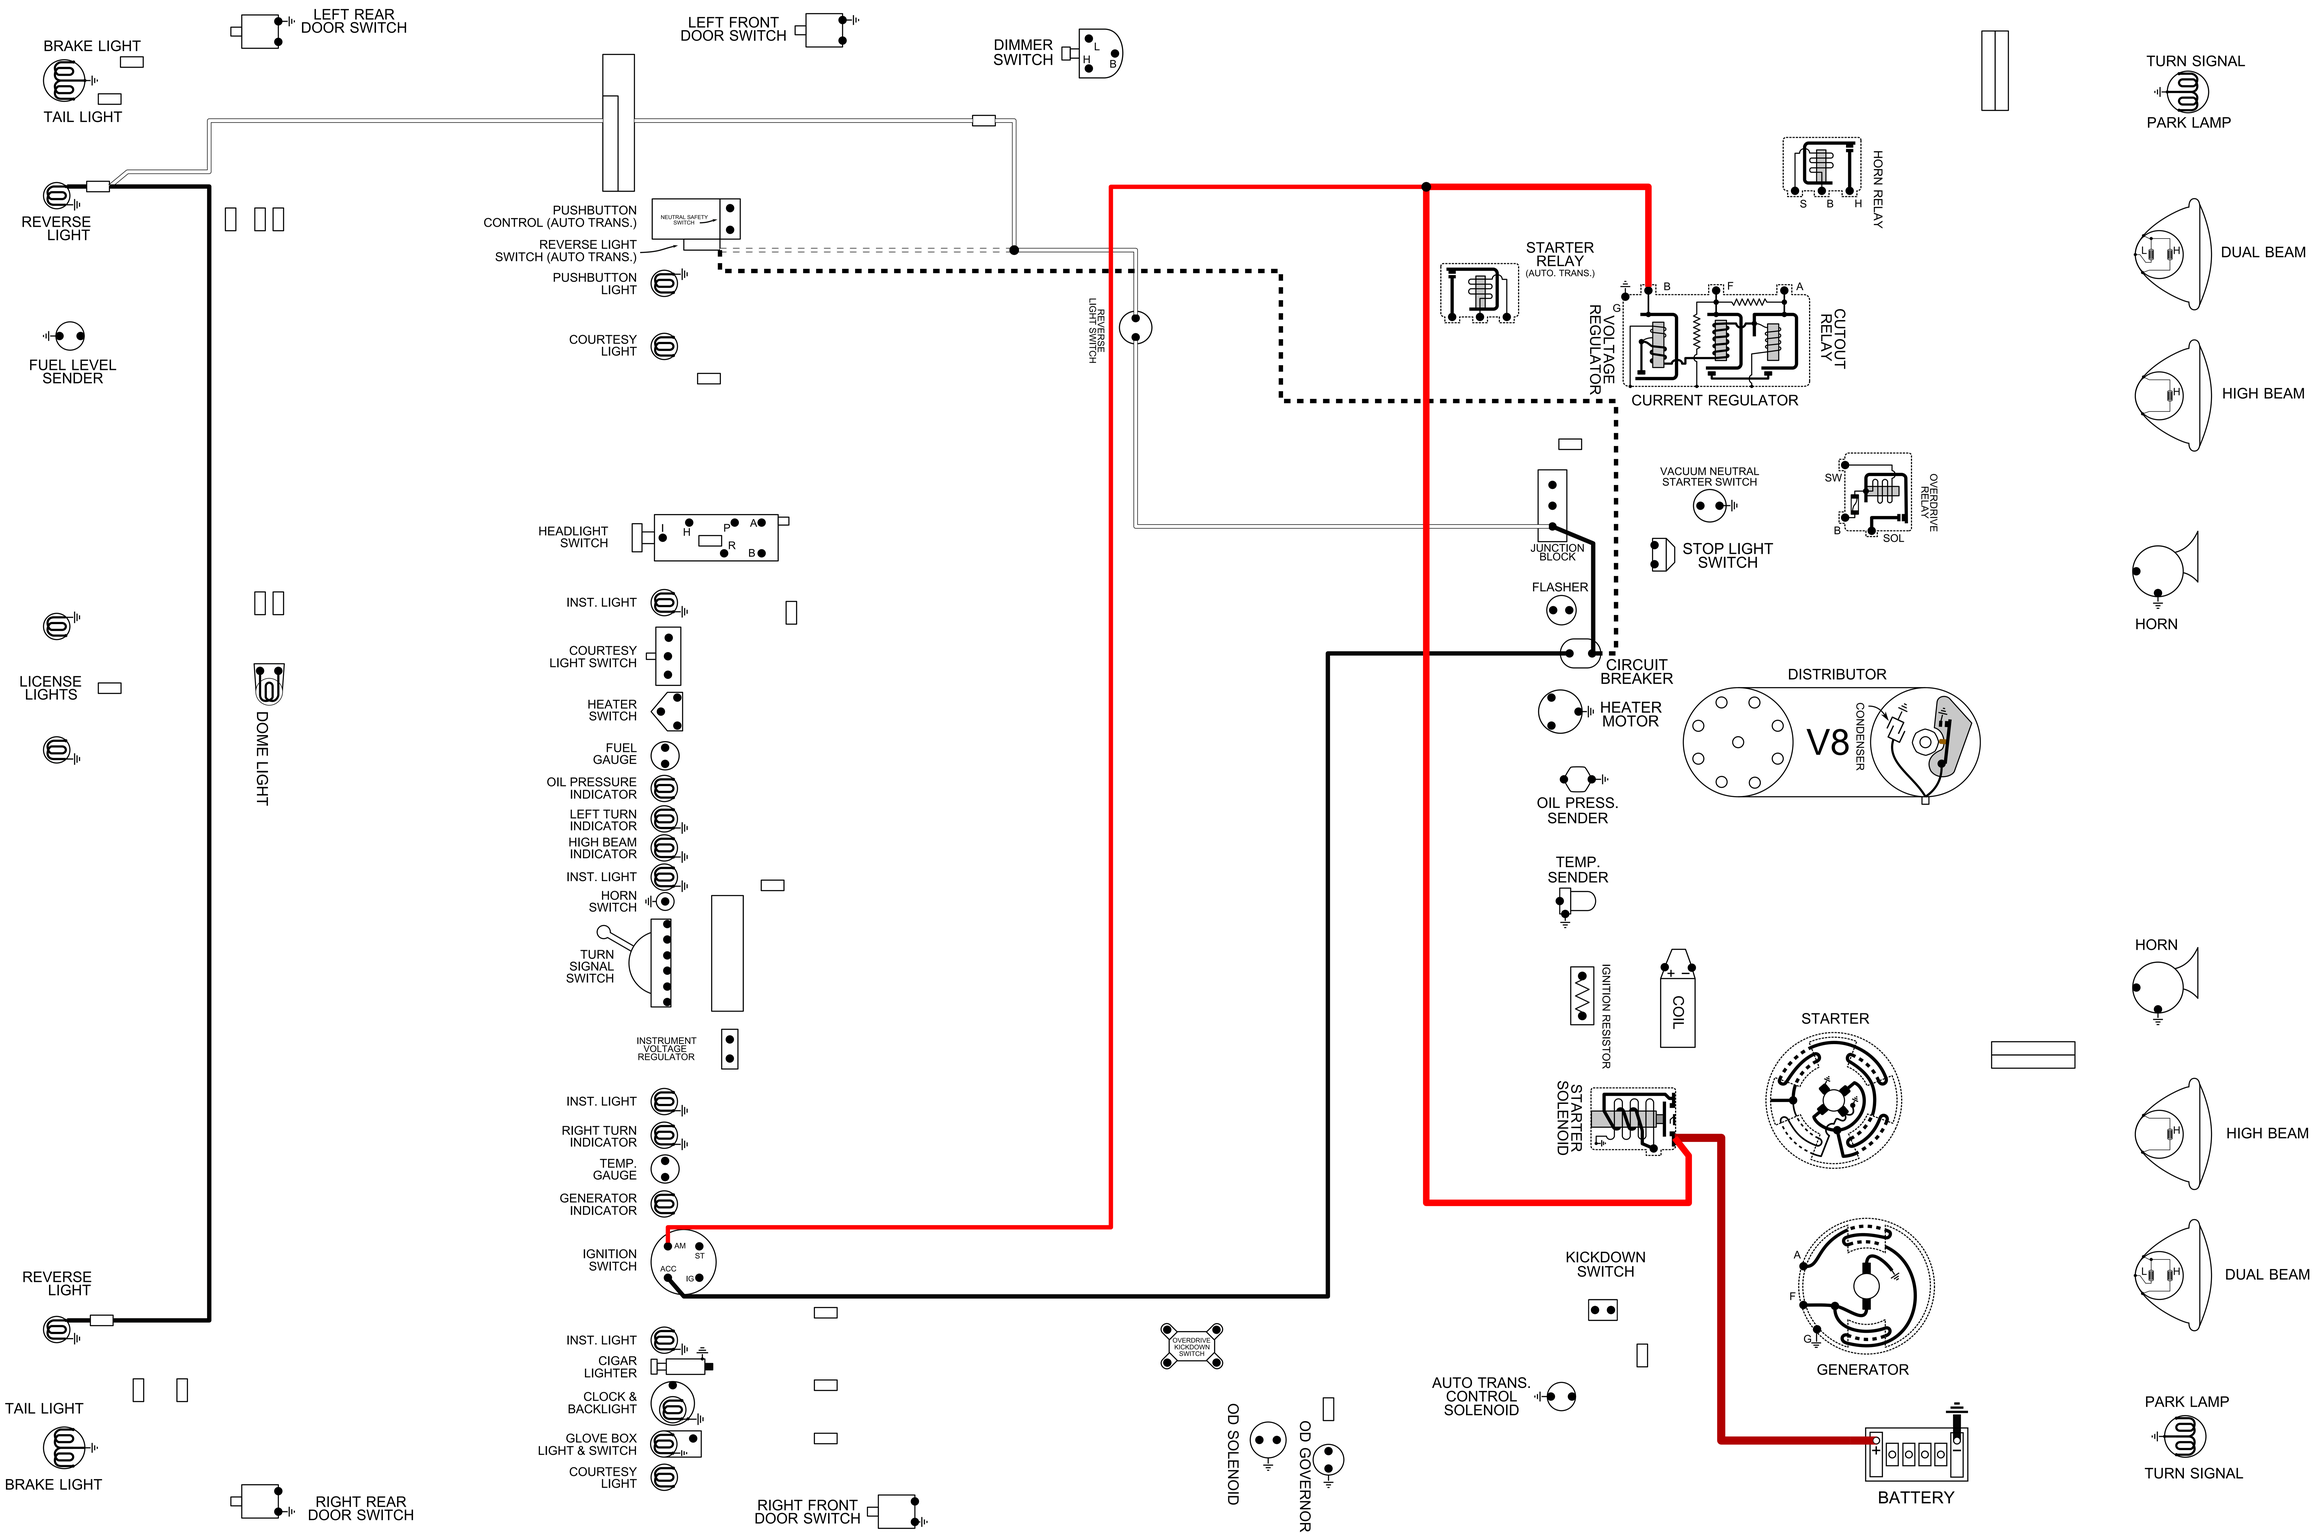

CINCO

1961 RAMBLER AMBASSADOR & CLASSIC V8

DOME & COURTESY LIGHTS

BRAKE LIGHT
TAIL LIGHT
REVERSE LIGHT
FUEL LEVEL SENDER
LICENSE LIGHTS
REVERSE LIGHT
TAIL LIGHT
BRAKE LIGHT
LEFT REAR DOOR SWITCH
DOME LIGHT
RIGHT REAR DOOR SWITCH
LEFT FRONT DOOR SWITCH
DIMMER SWITCH
PUSHBUTTON CONTROL (AUTO TRANS.)
NEUTRAL SAFETY SWITCH
REVERSE LIGHT SWITCH (AUTO TRANS.)
PUSHBUTTON LIGHT
COURTESY LIGHT
REVERSE LIGHT SWITCH
HEADLIGHT SWITCH
INST. LIGHT
COURTESY LIGHT SWITCH
HEATER SWITCH
FUEL GAUGE
OIL PRESSURE INDICATOR
LEFT TURN INDICATOR
HIGH BEAM INDICATOR
INST. LIGHT
HORN SWITCH
TURN SIGNAL SWITCH
INSTRUMENT VOLTAGE REGULATOR
INST. LIGHT
RIGHT TURN INDICATOR
TEMP. GAUGE
GENERATOR INDICATOR
IGNITION SWITCH
INST. LIGHT
CIGAR LIGHTER
CLOCK & BACKLIGHT
GLOVE BOX LIGHT & SWITCH
COURTESY LIGHT
RIGHT FRONT DOOR SWITCH
OVERDRIVE KICKDOWN SWITCH
OD SOLENOID
OD GOVERNOR
HORN RELAY
STARTER RELAY (AUTO. TRANS.)
VOLTAGE REGULATOR
CUTOUT RELAY
CURRENT REGULATOR
VACUUM NEUTRAL STARTER SWITCH
STOP LIGHT SWITCH
OVERDRIVE RELAY
JUNCTION BLOCK
FLASHER
CIRCUIT BREAKER
HEATER MOTOR
DISTRIBUTOR
V8
CONDENSER
OIL PRESS. SENDER
TEMP. SENDER
IGNITION RESISTOR
COIL
STARTER SOLENOID
STARTER
KICKDOWN SWITCH
AUTO TRANS. CONTROL SOLENOID
GENERATOR
BATTERY
TURN SIGNAL
PARK LAMP
DUAL BEAM
HIGH BEAM
HORN
HORN
HIGH BEAM
DUAL BEAM
PARK LAMP
TURN SIGNAL

CINCO